

REMOVE PARTS - LX200 CLASSIC

Olivier GADAL

1. Power Panel
2. Mainboard
3. Right Ascension Motor (RA)
4. Declination Motor (DEC)
5. Declination Cable



Unplug Declination cable





Unplug declination motor cable (inside fork)






- UNDER TELESCOPE BASE
- Remove screws 1, 2, 3, 4, 5 and 6









- Remove mainboard protection

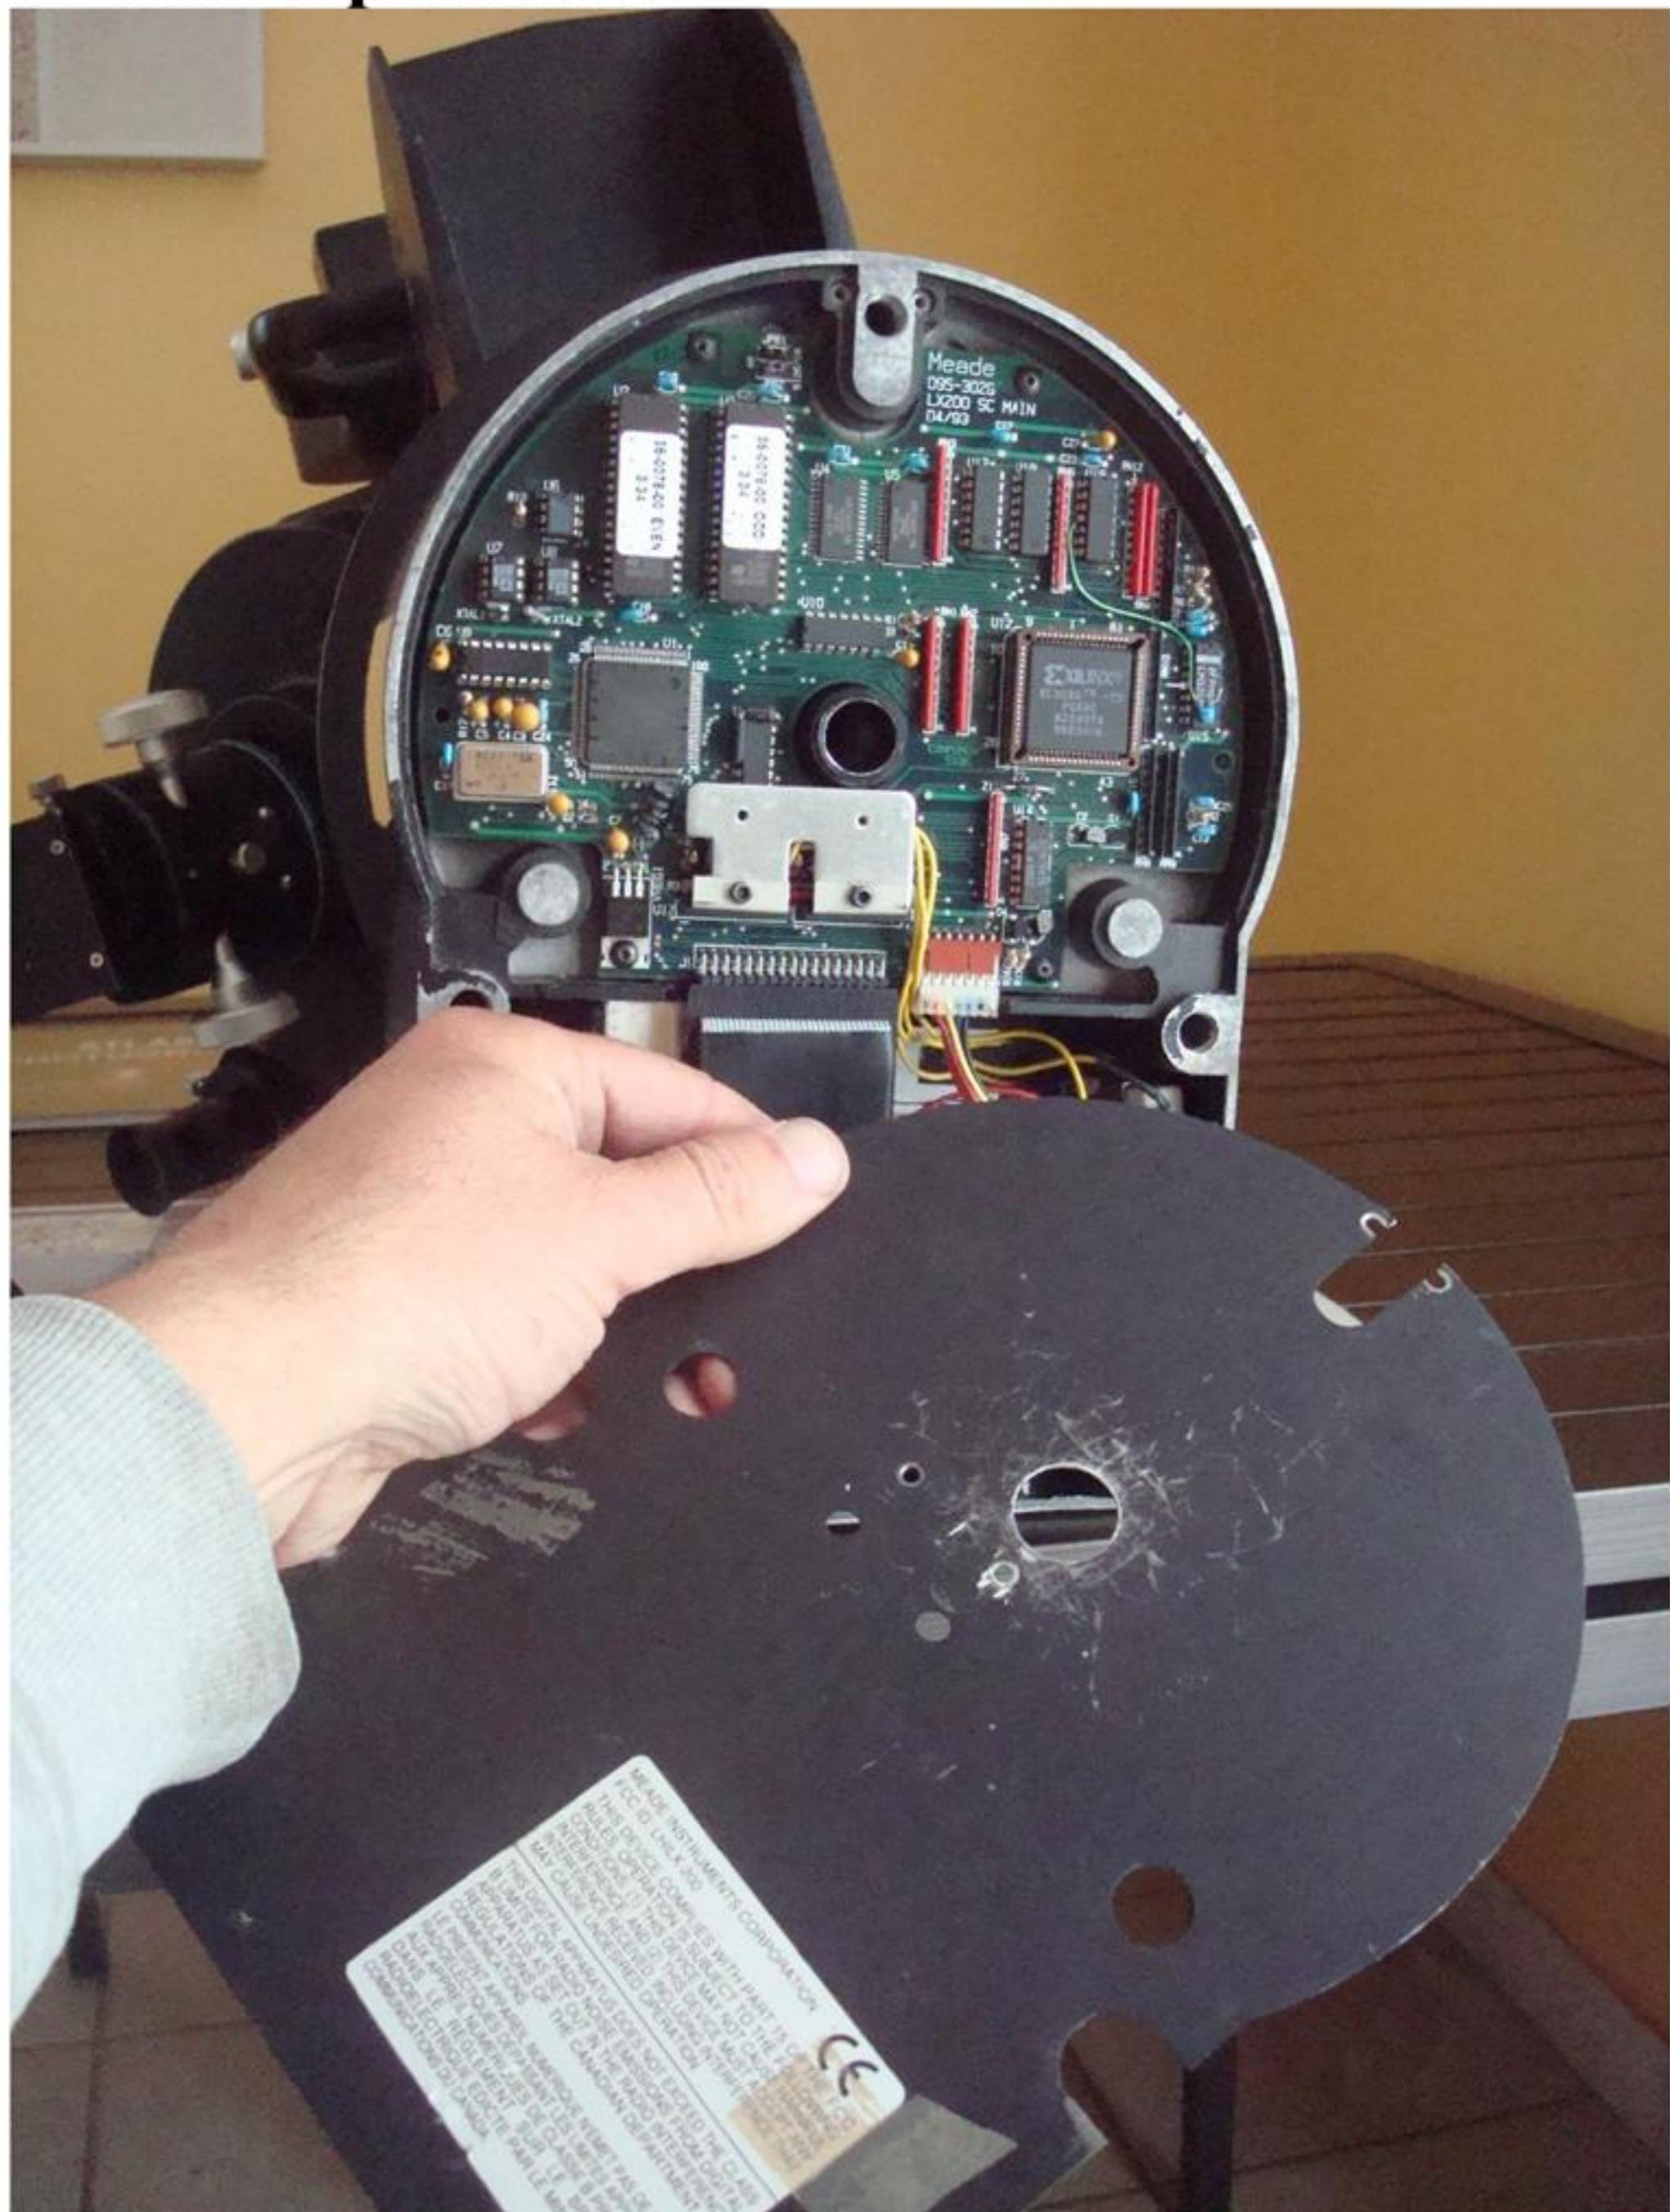



- Unplug ribbon cable (make lever with a flat screwdriver)

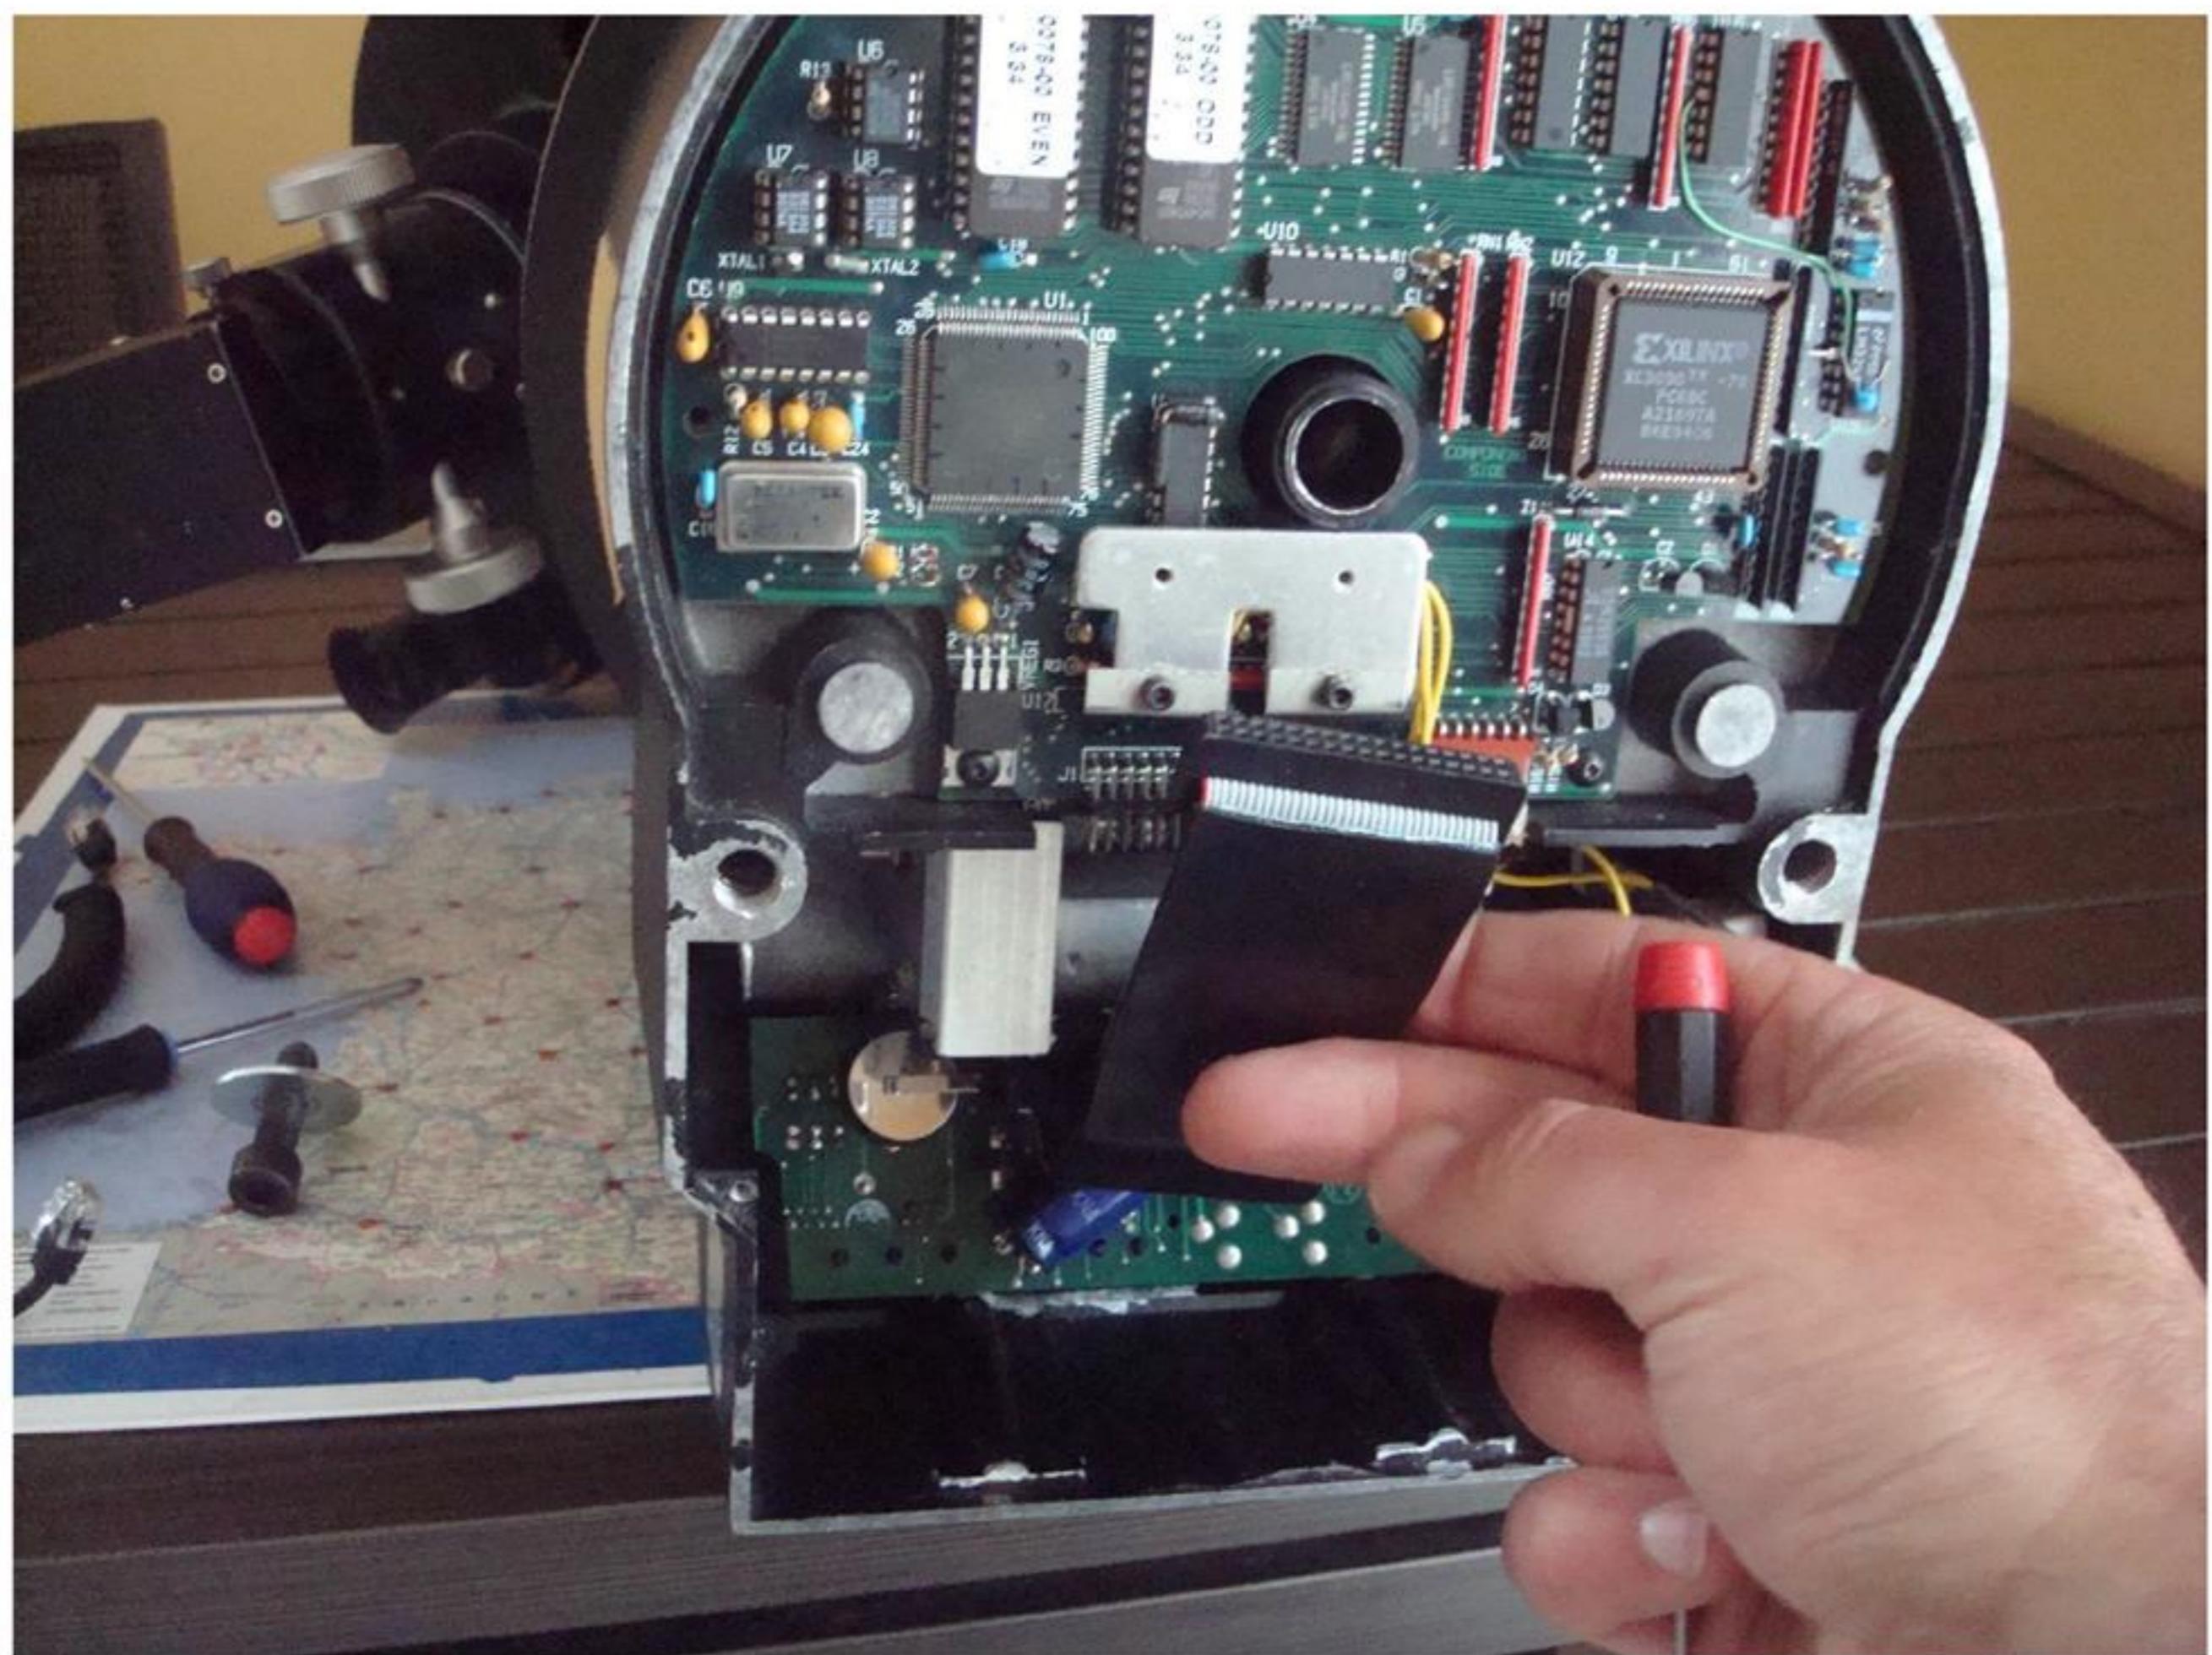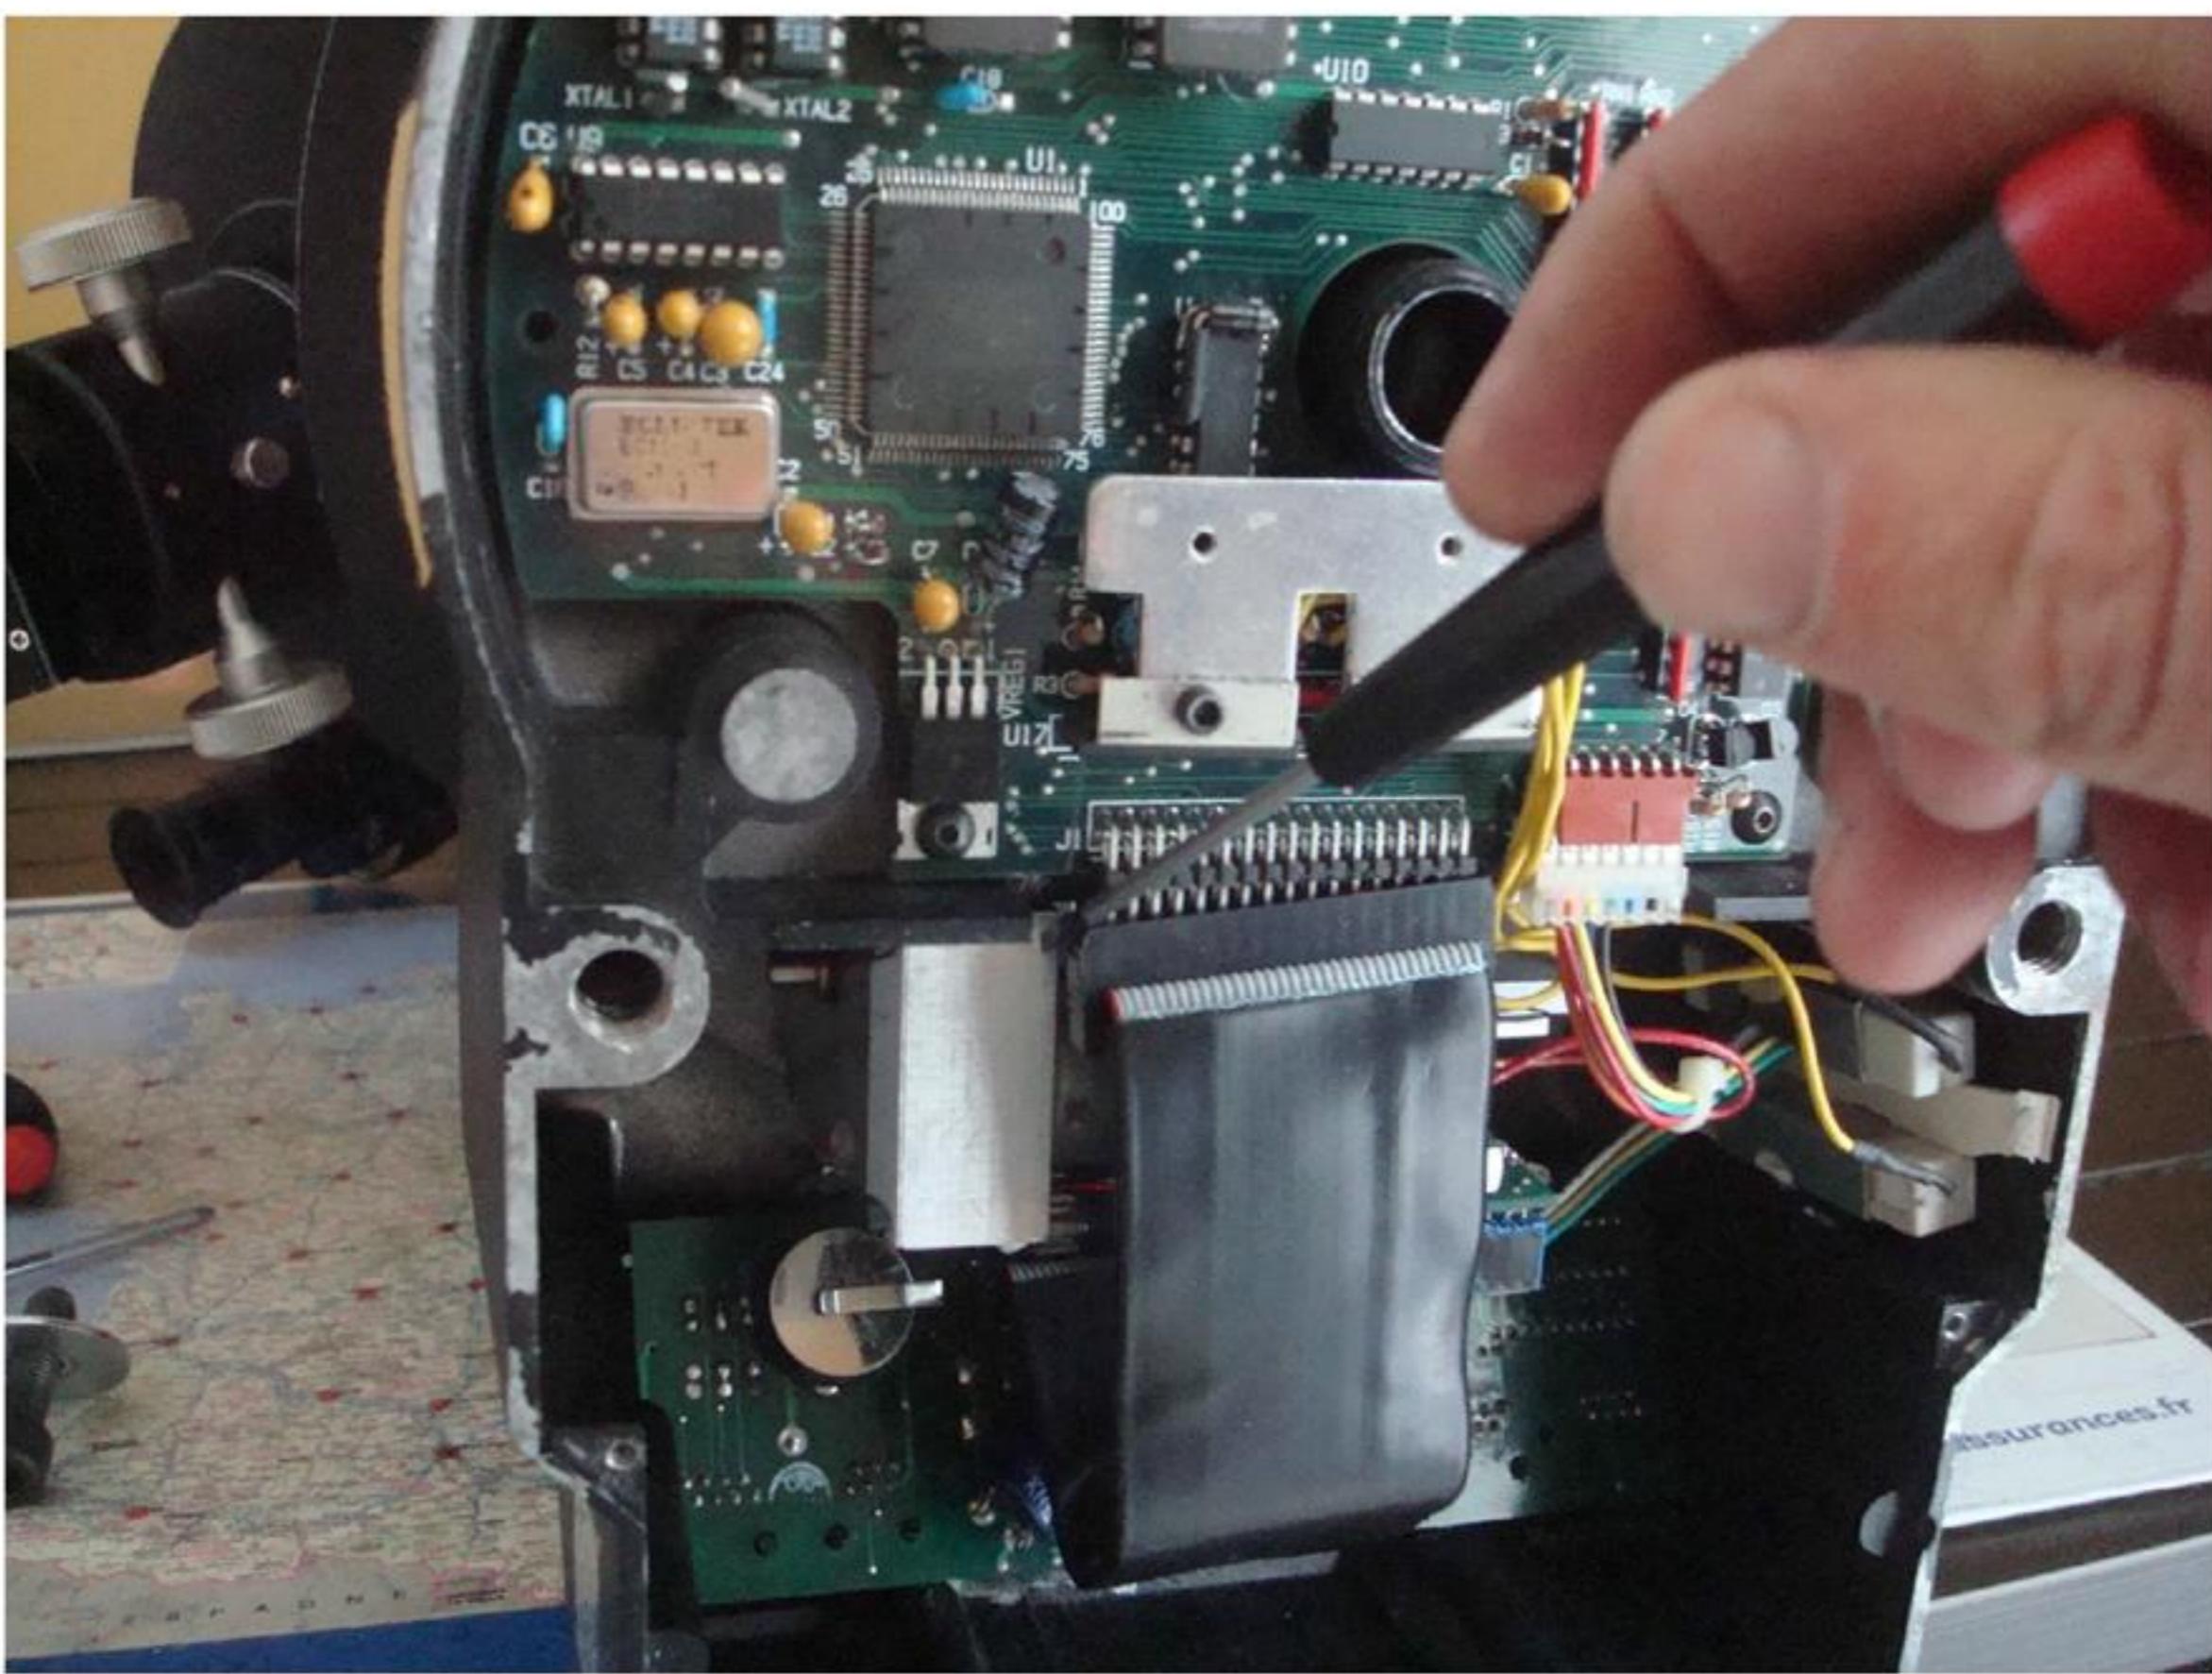


- Unplug RA motor connector

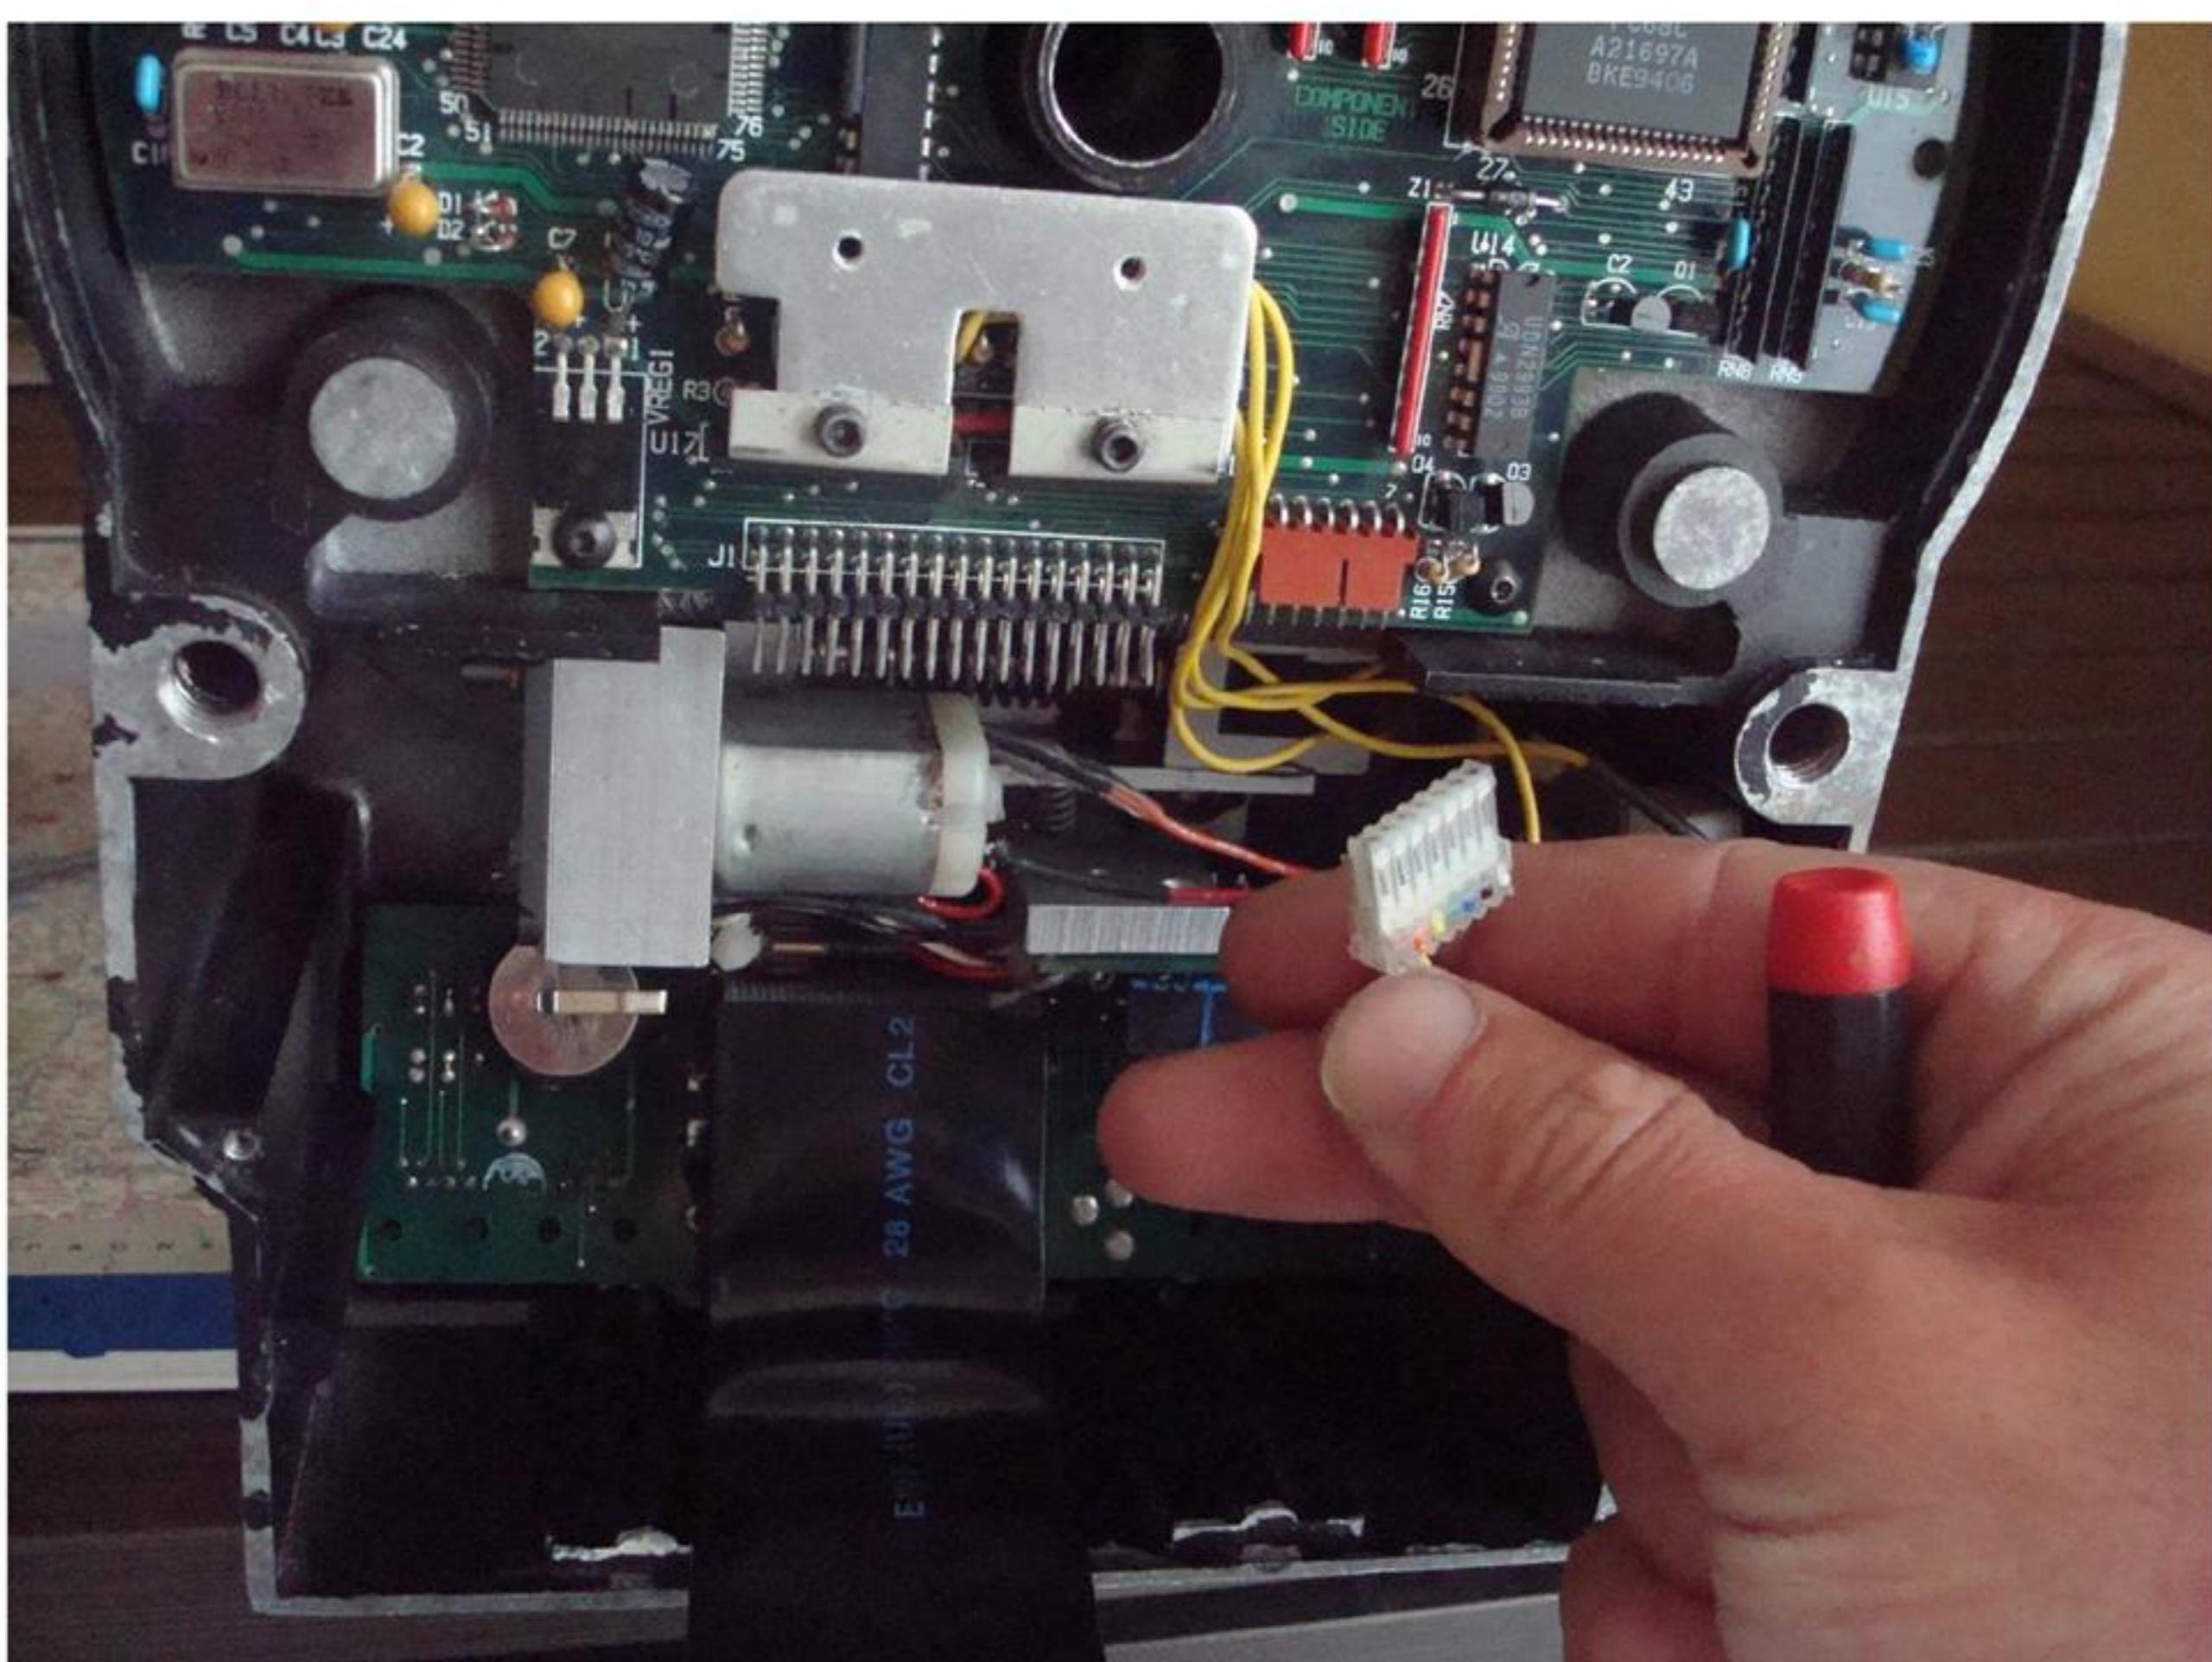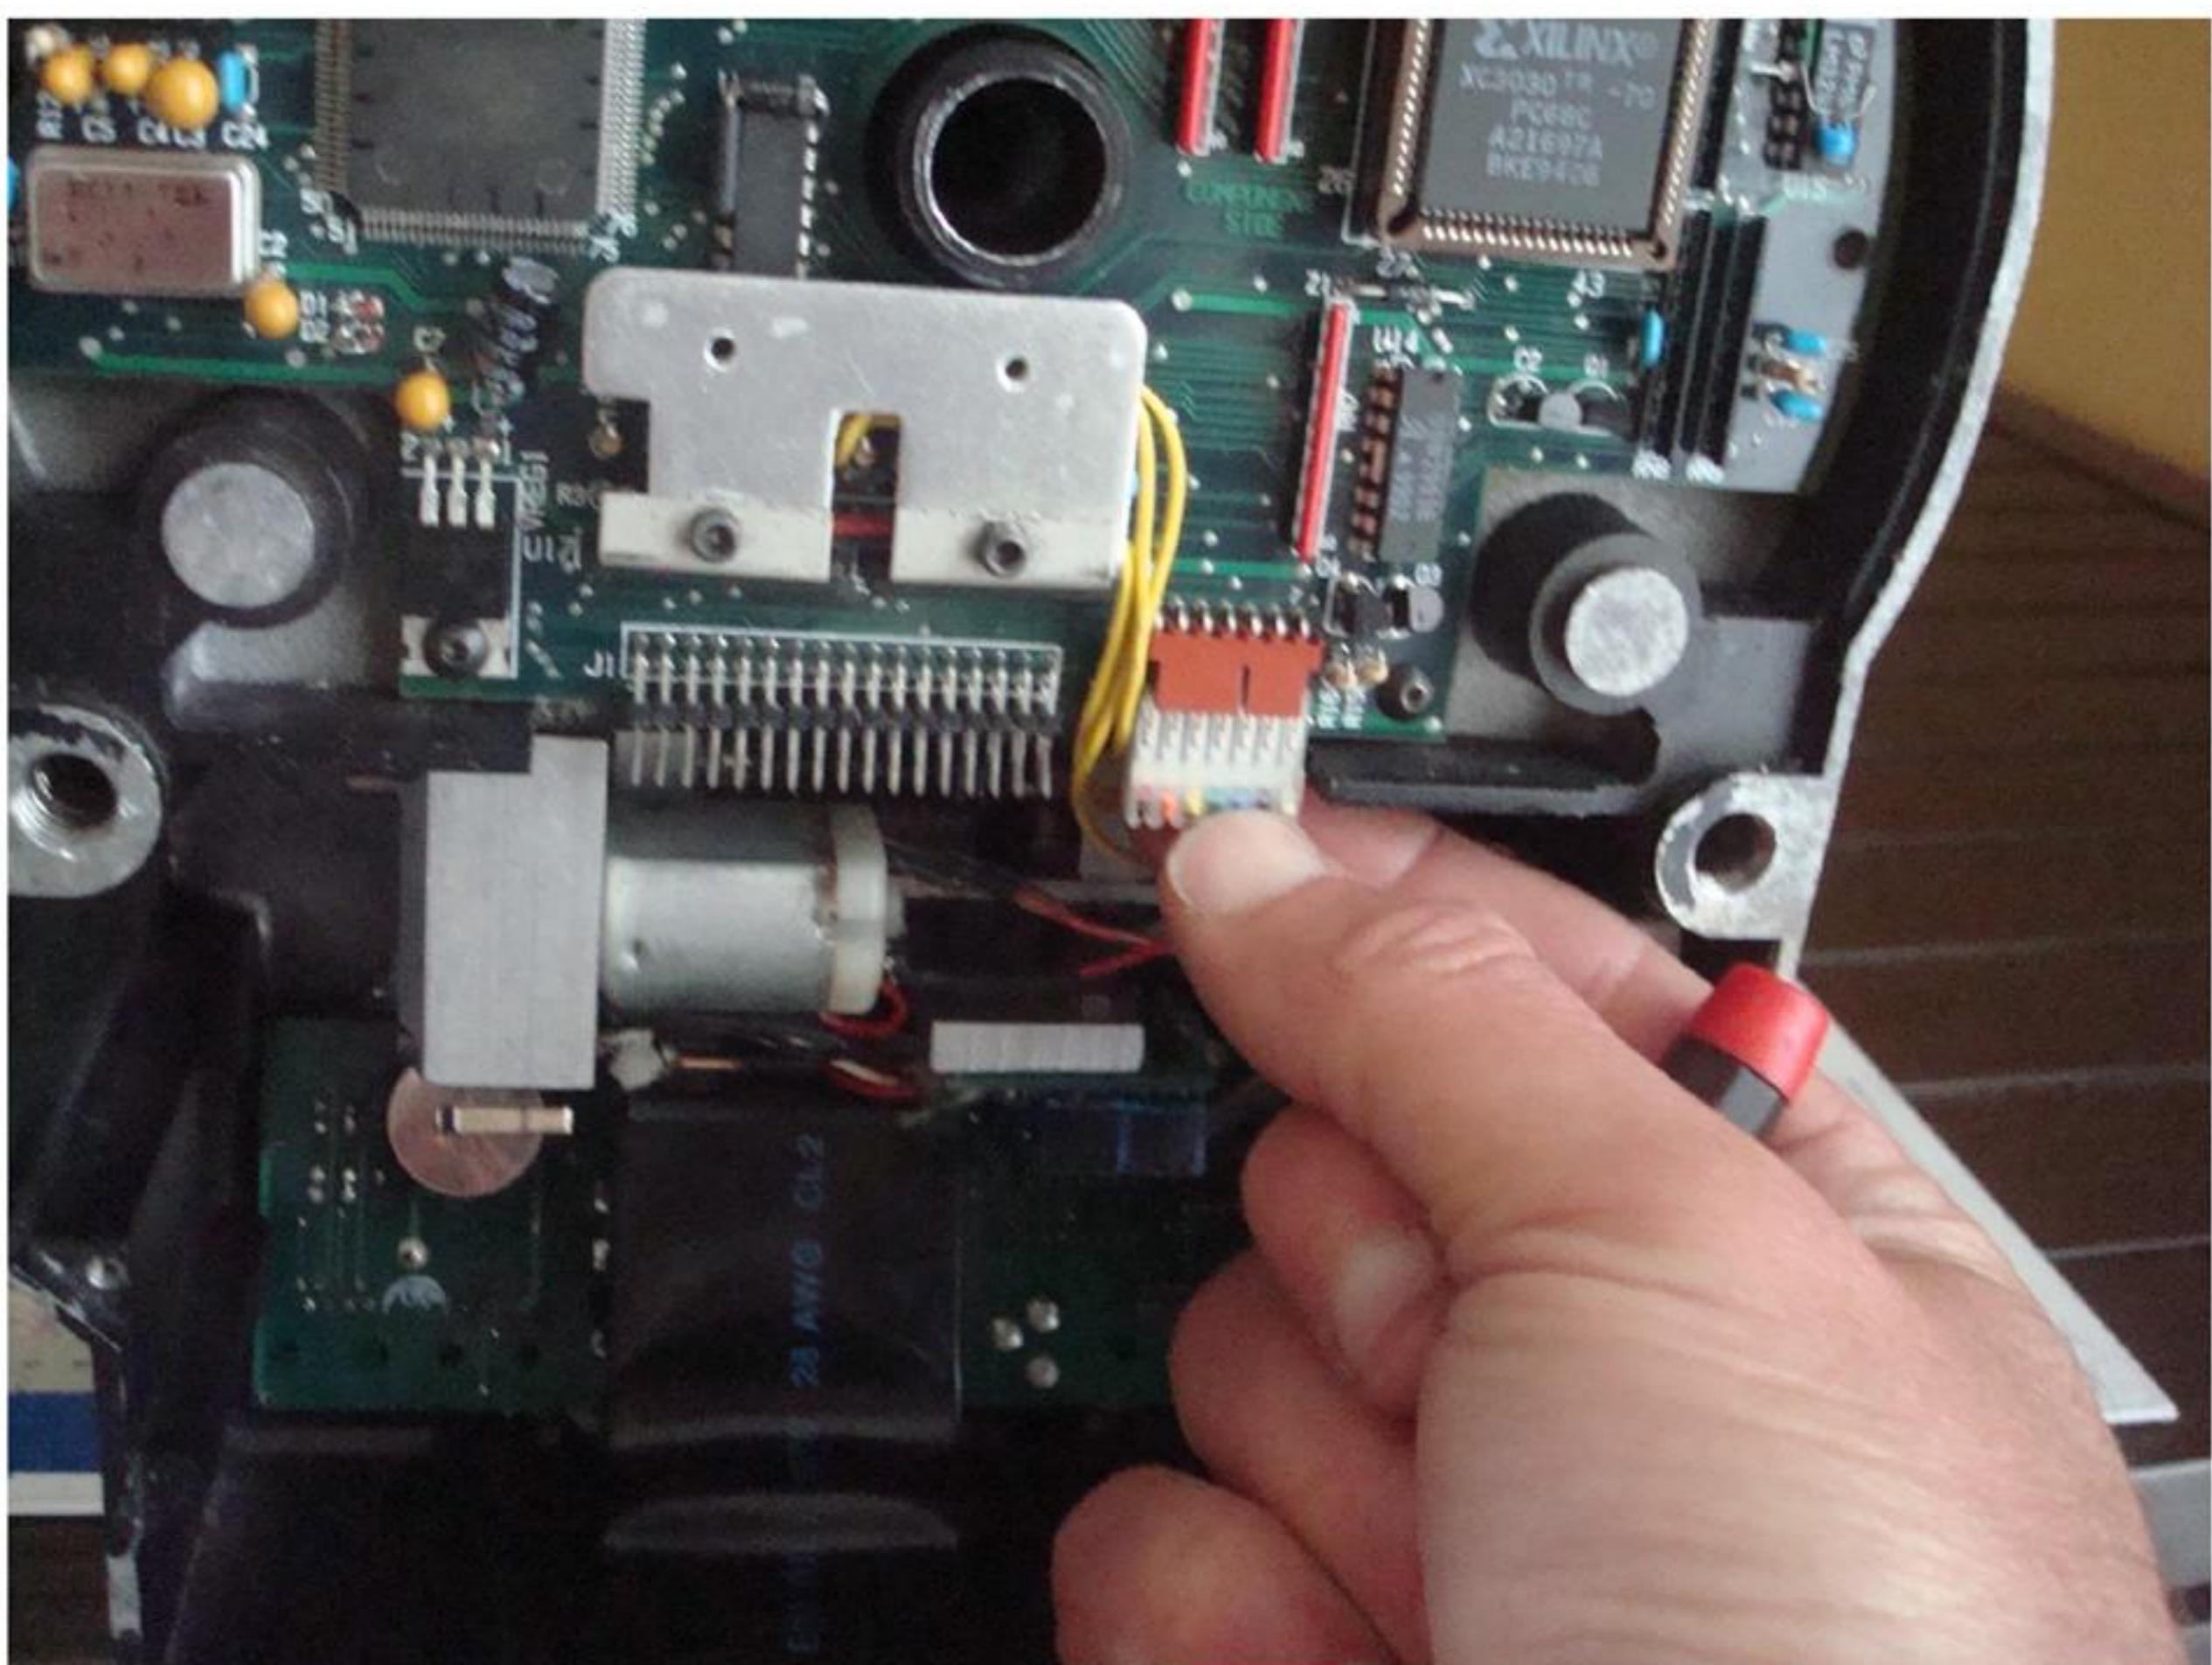


- Unstick white resistances

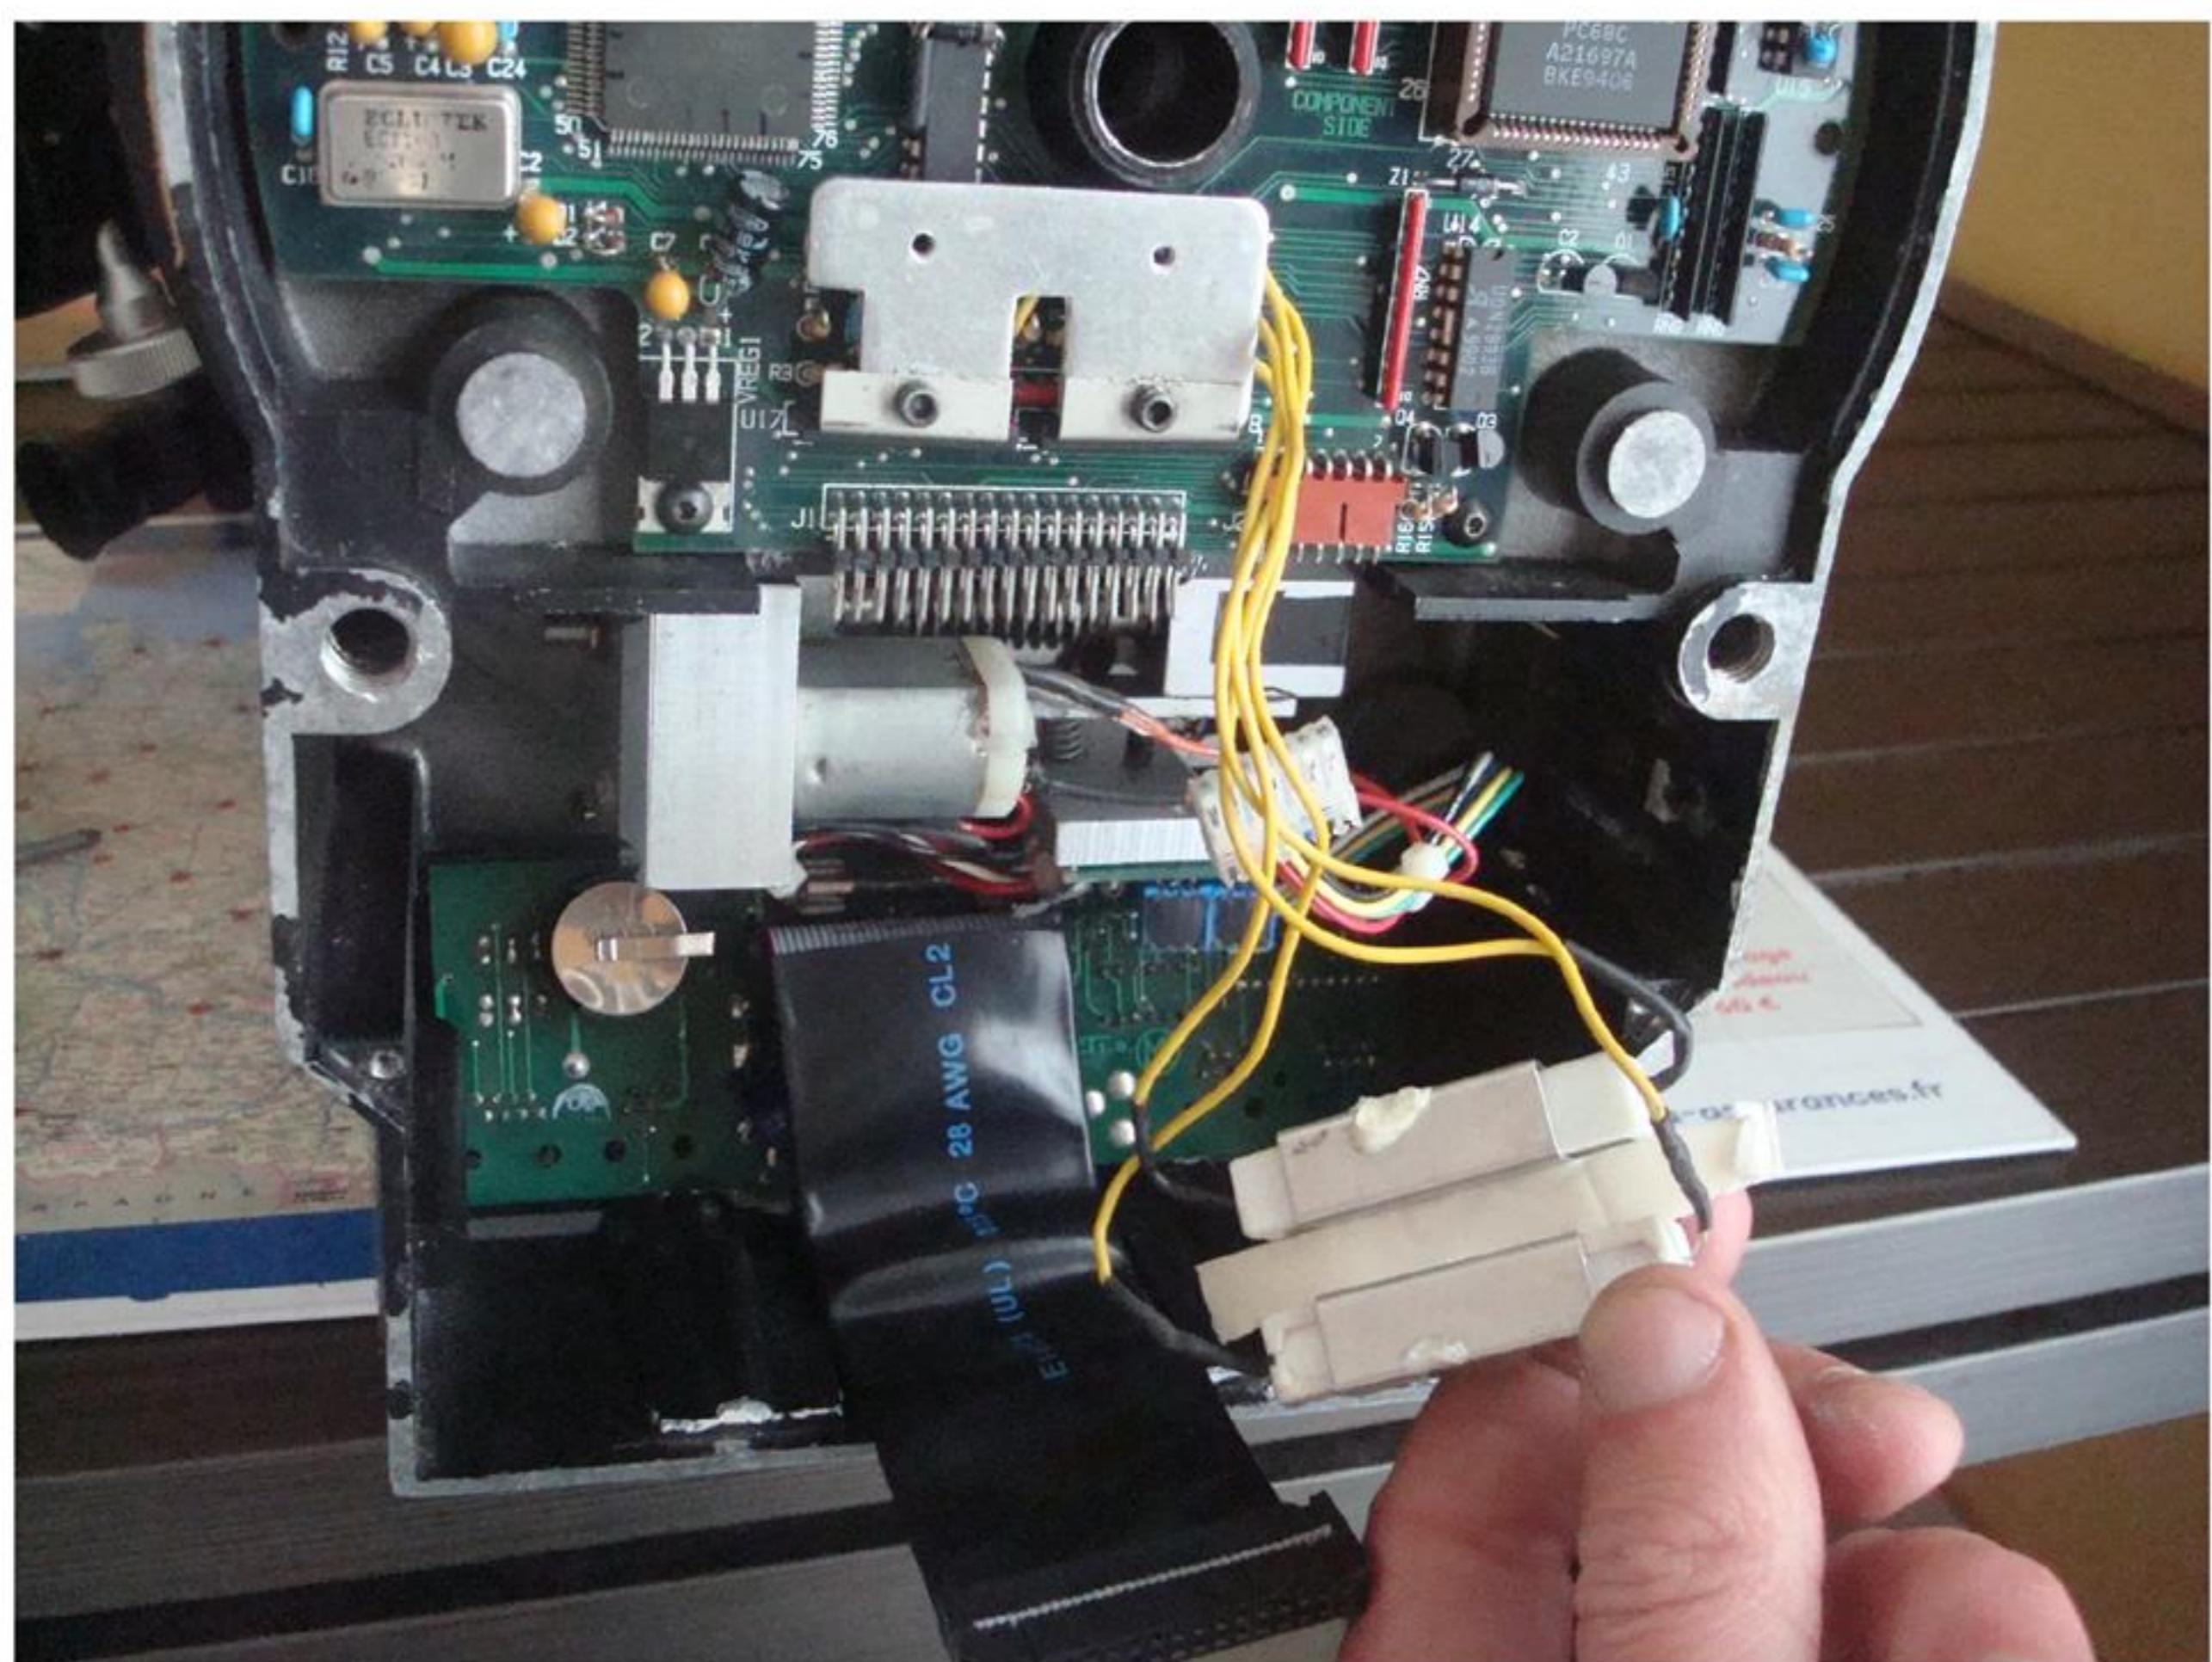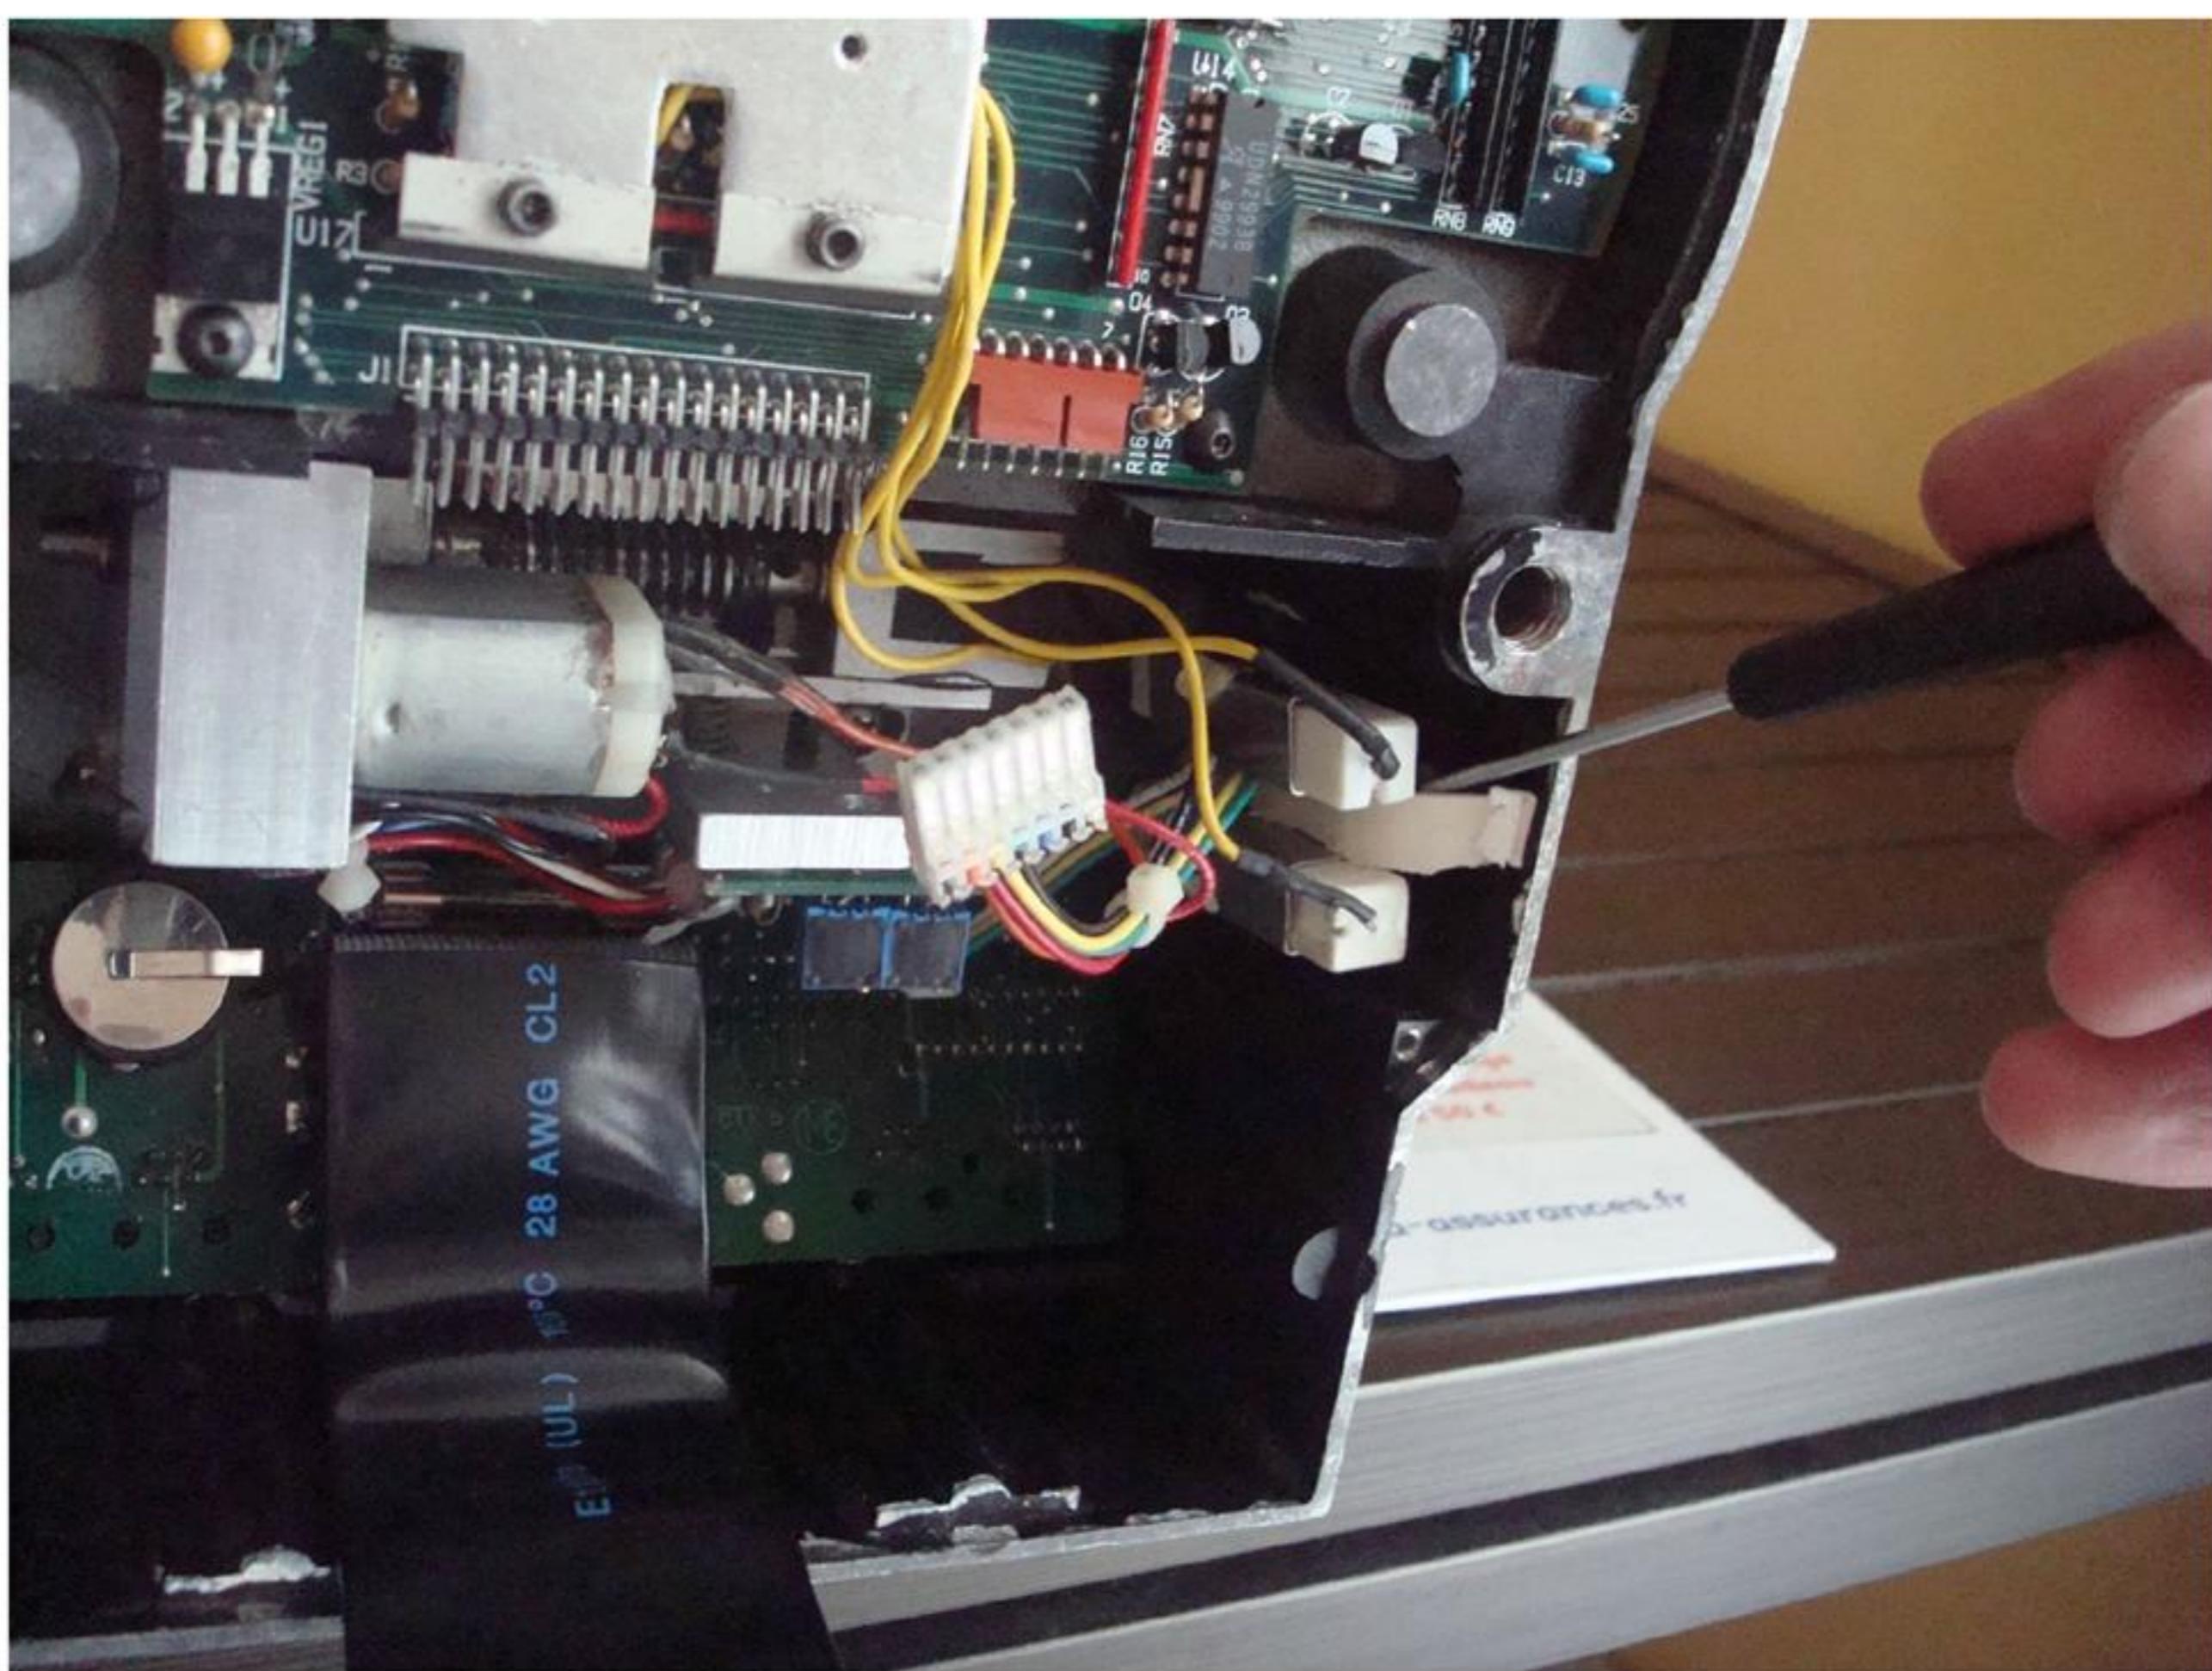



- Unscrew the 4 screws maintains motherboard

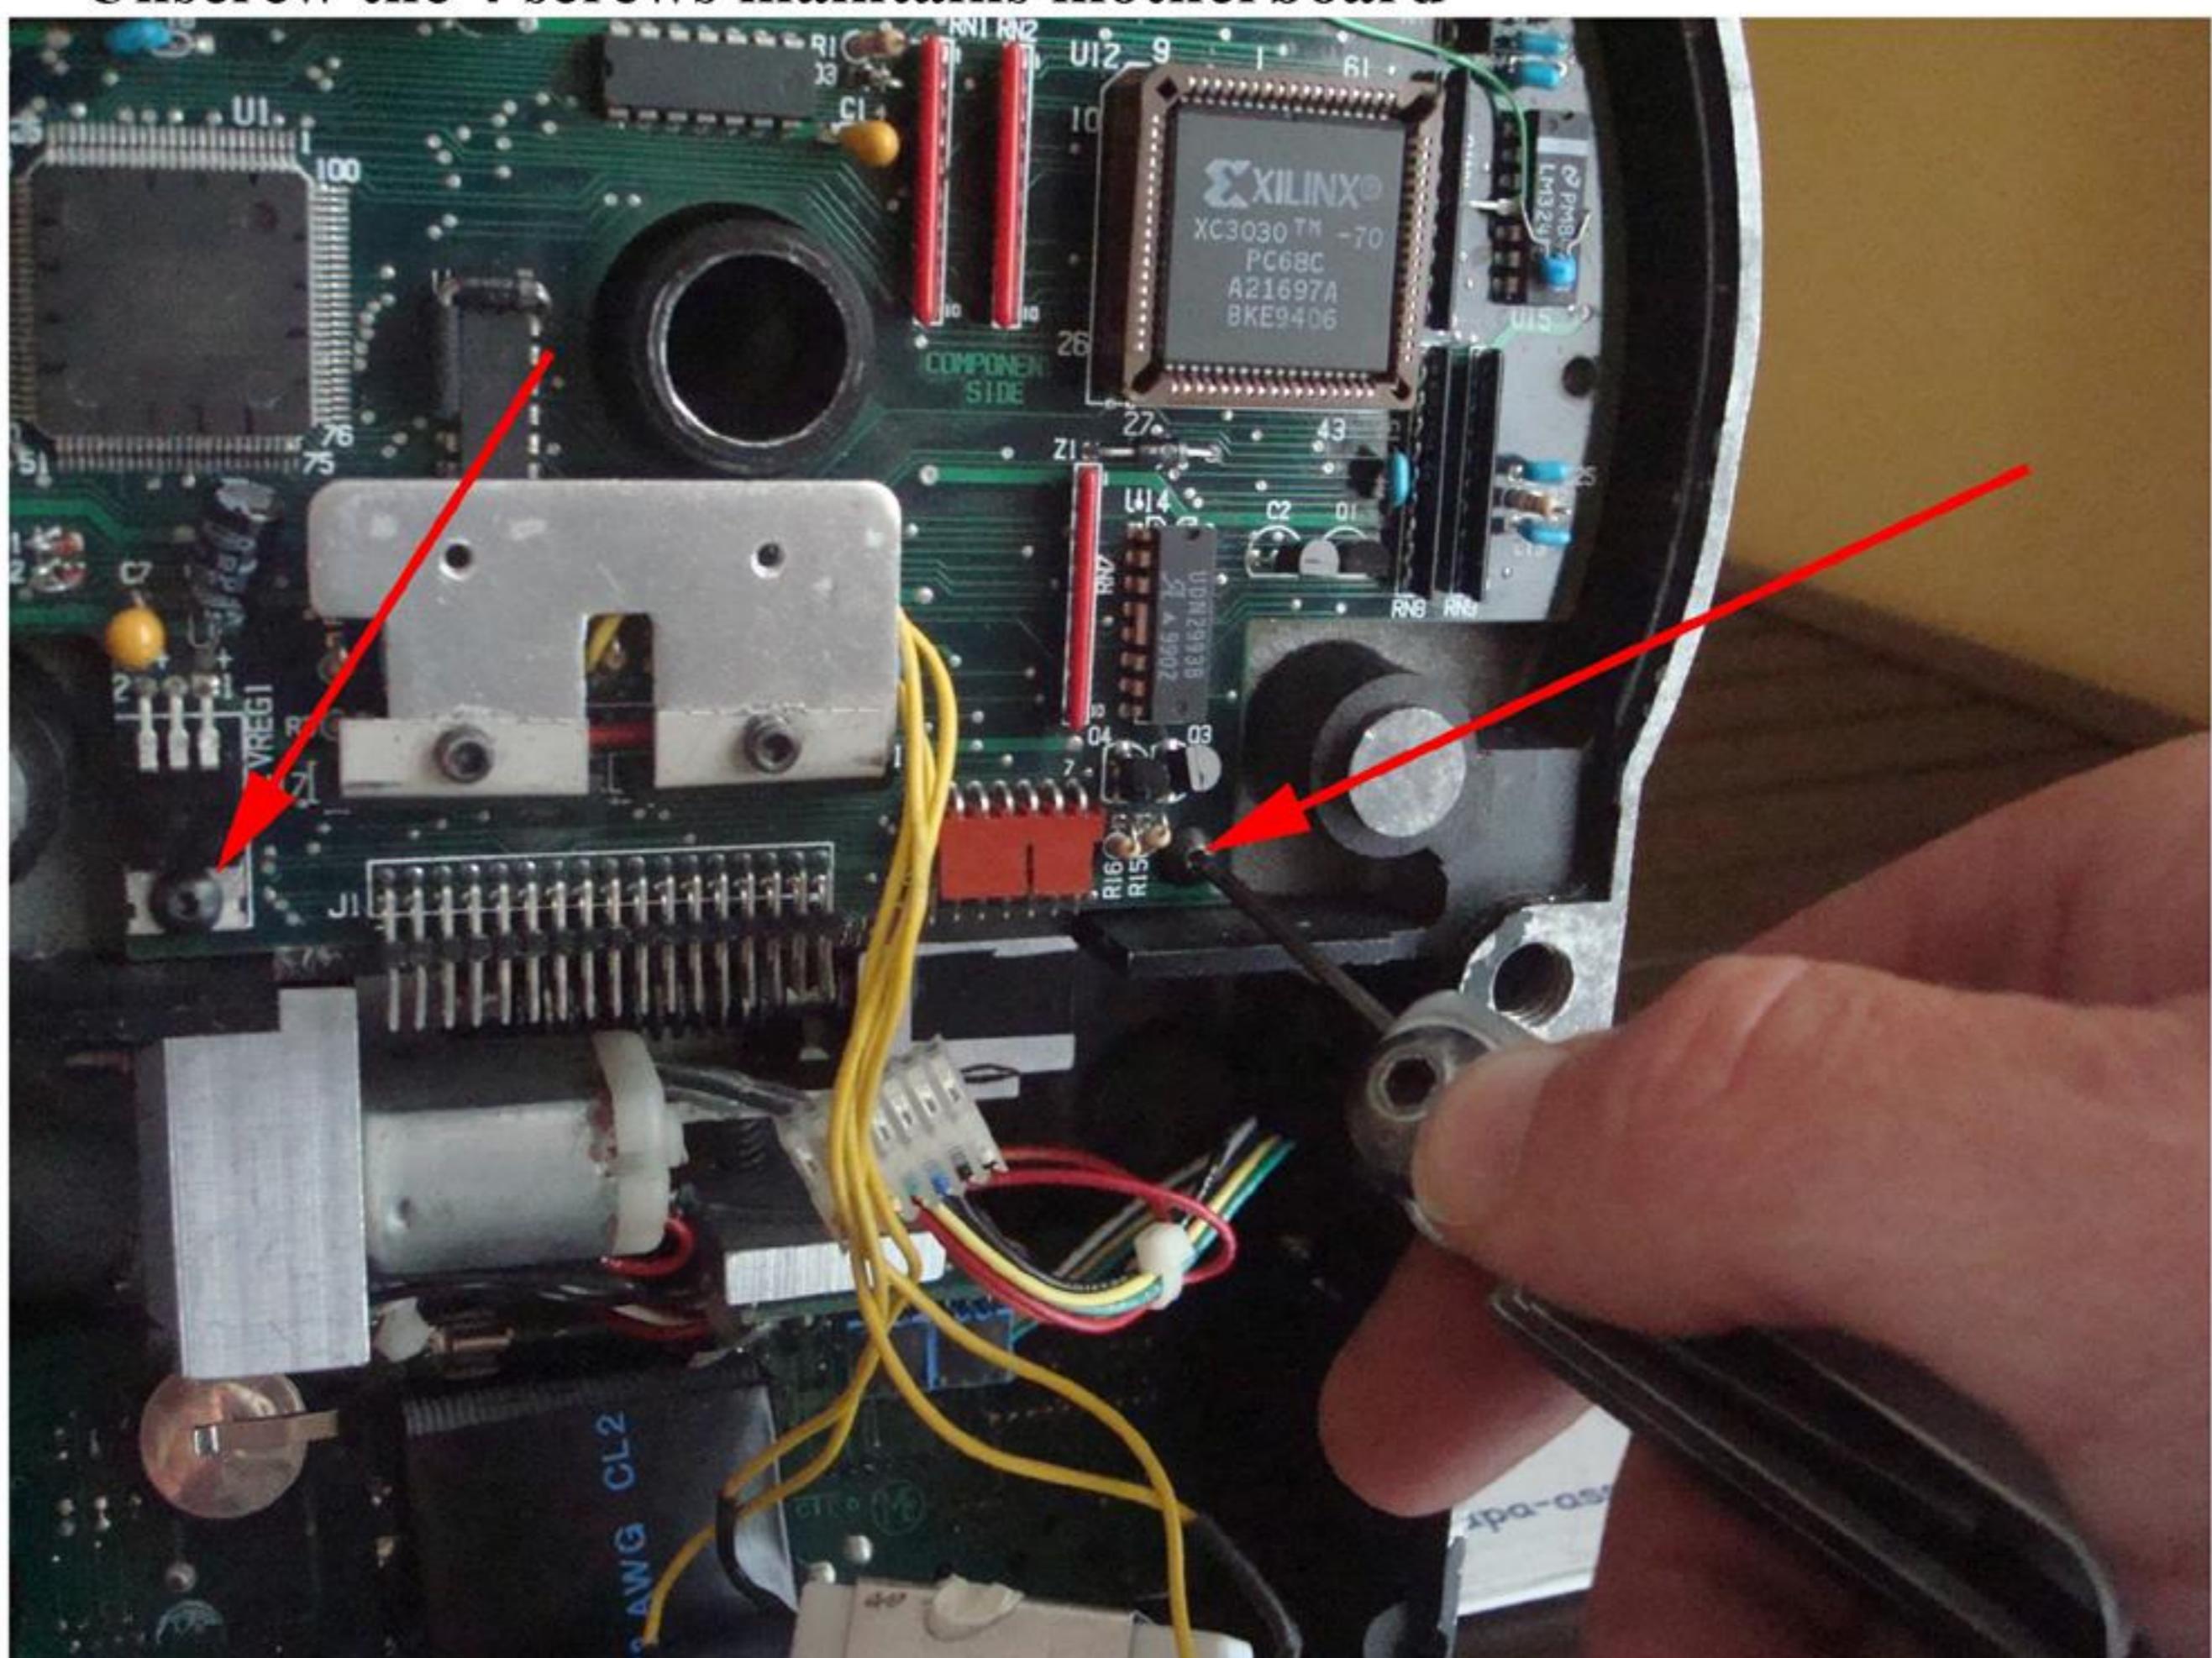


- Remove mainboard

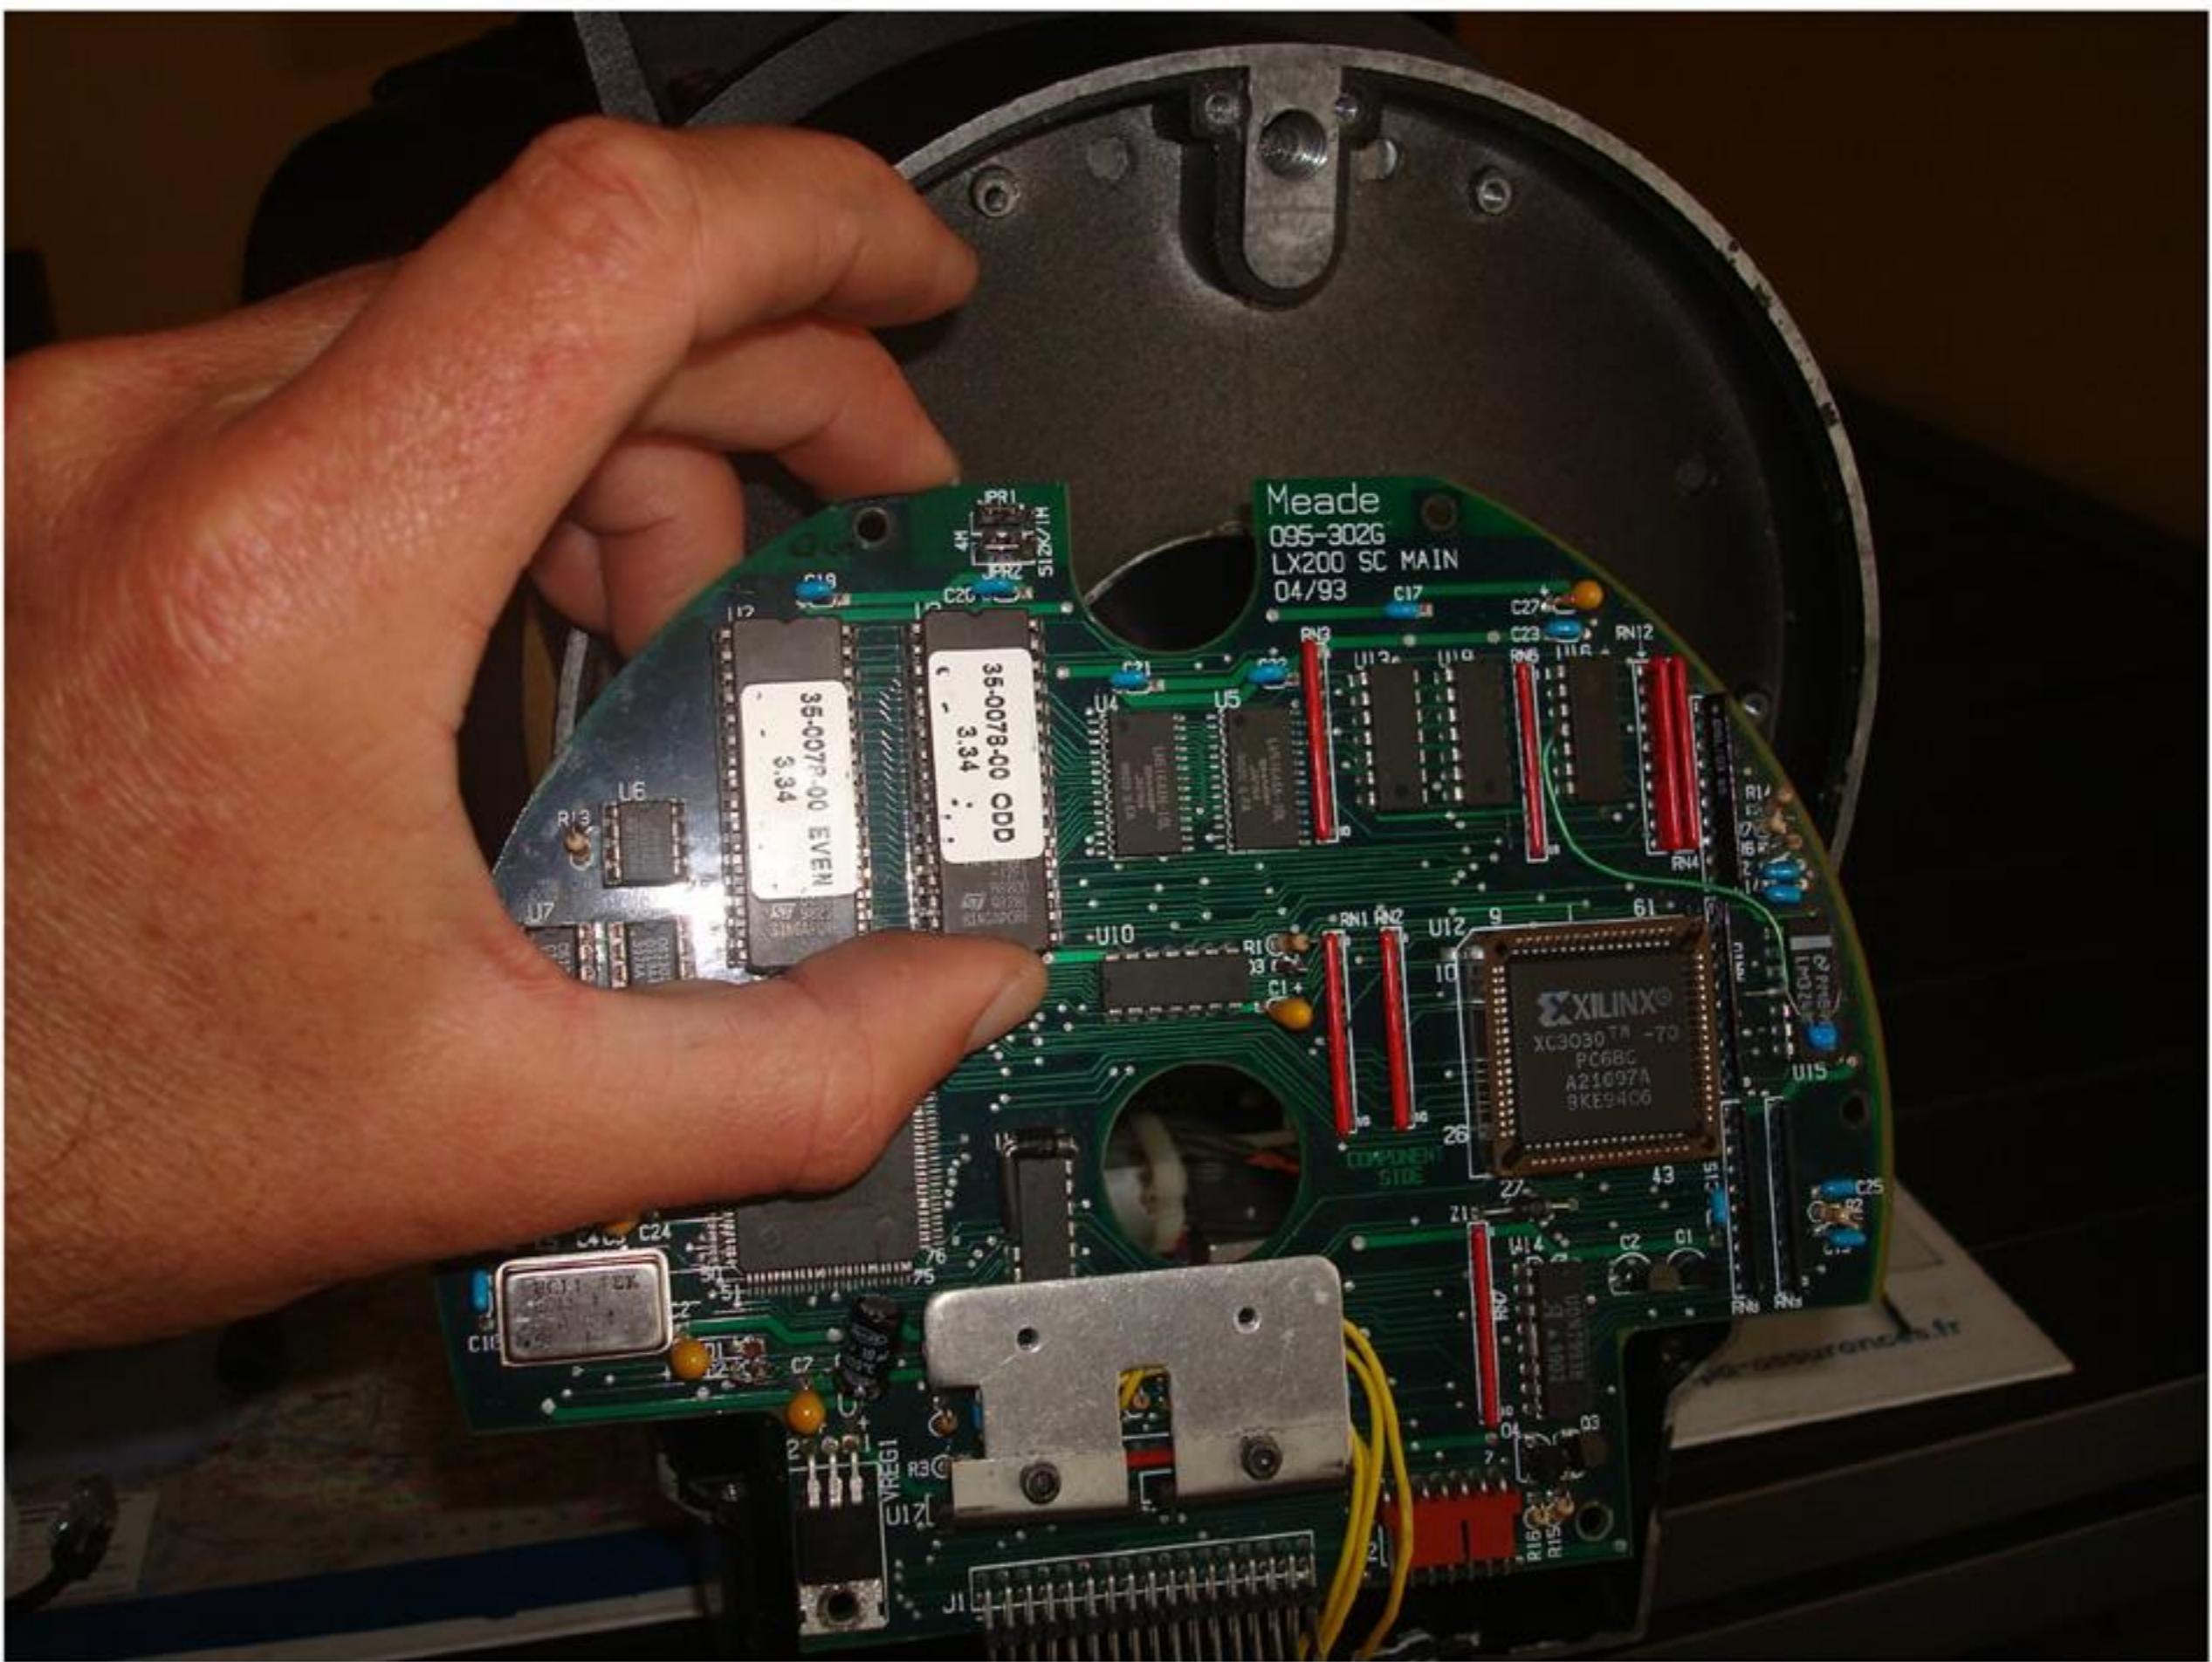


- RA Motor: unscrew screws 1 and 2 maintains RA motor

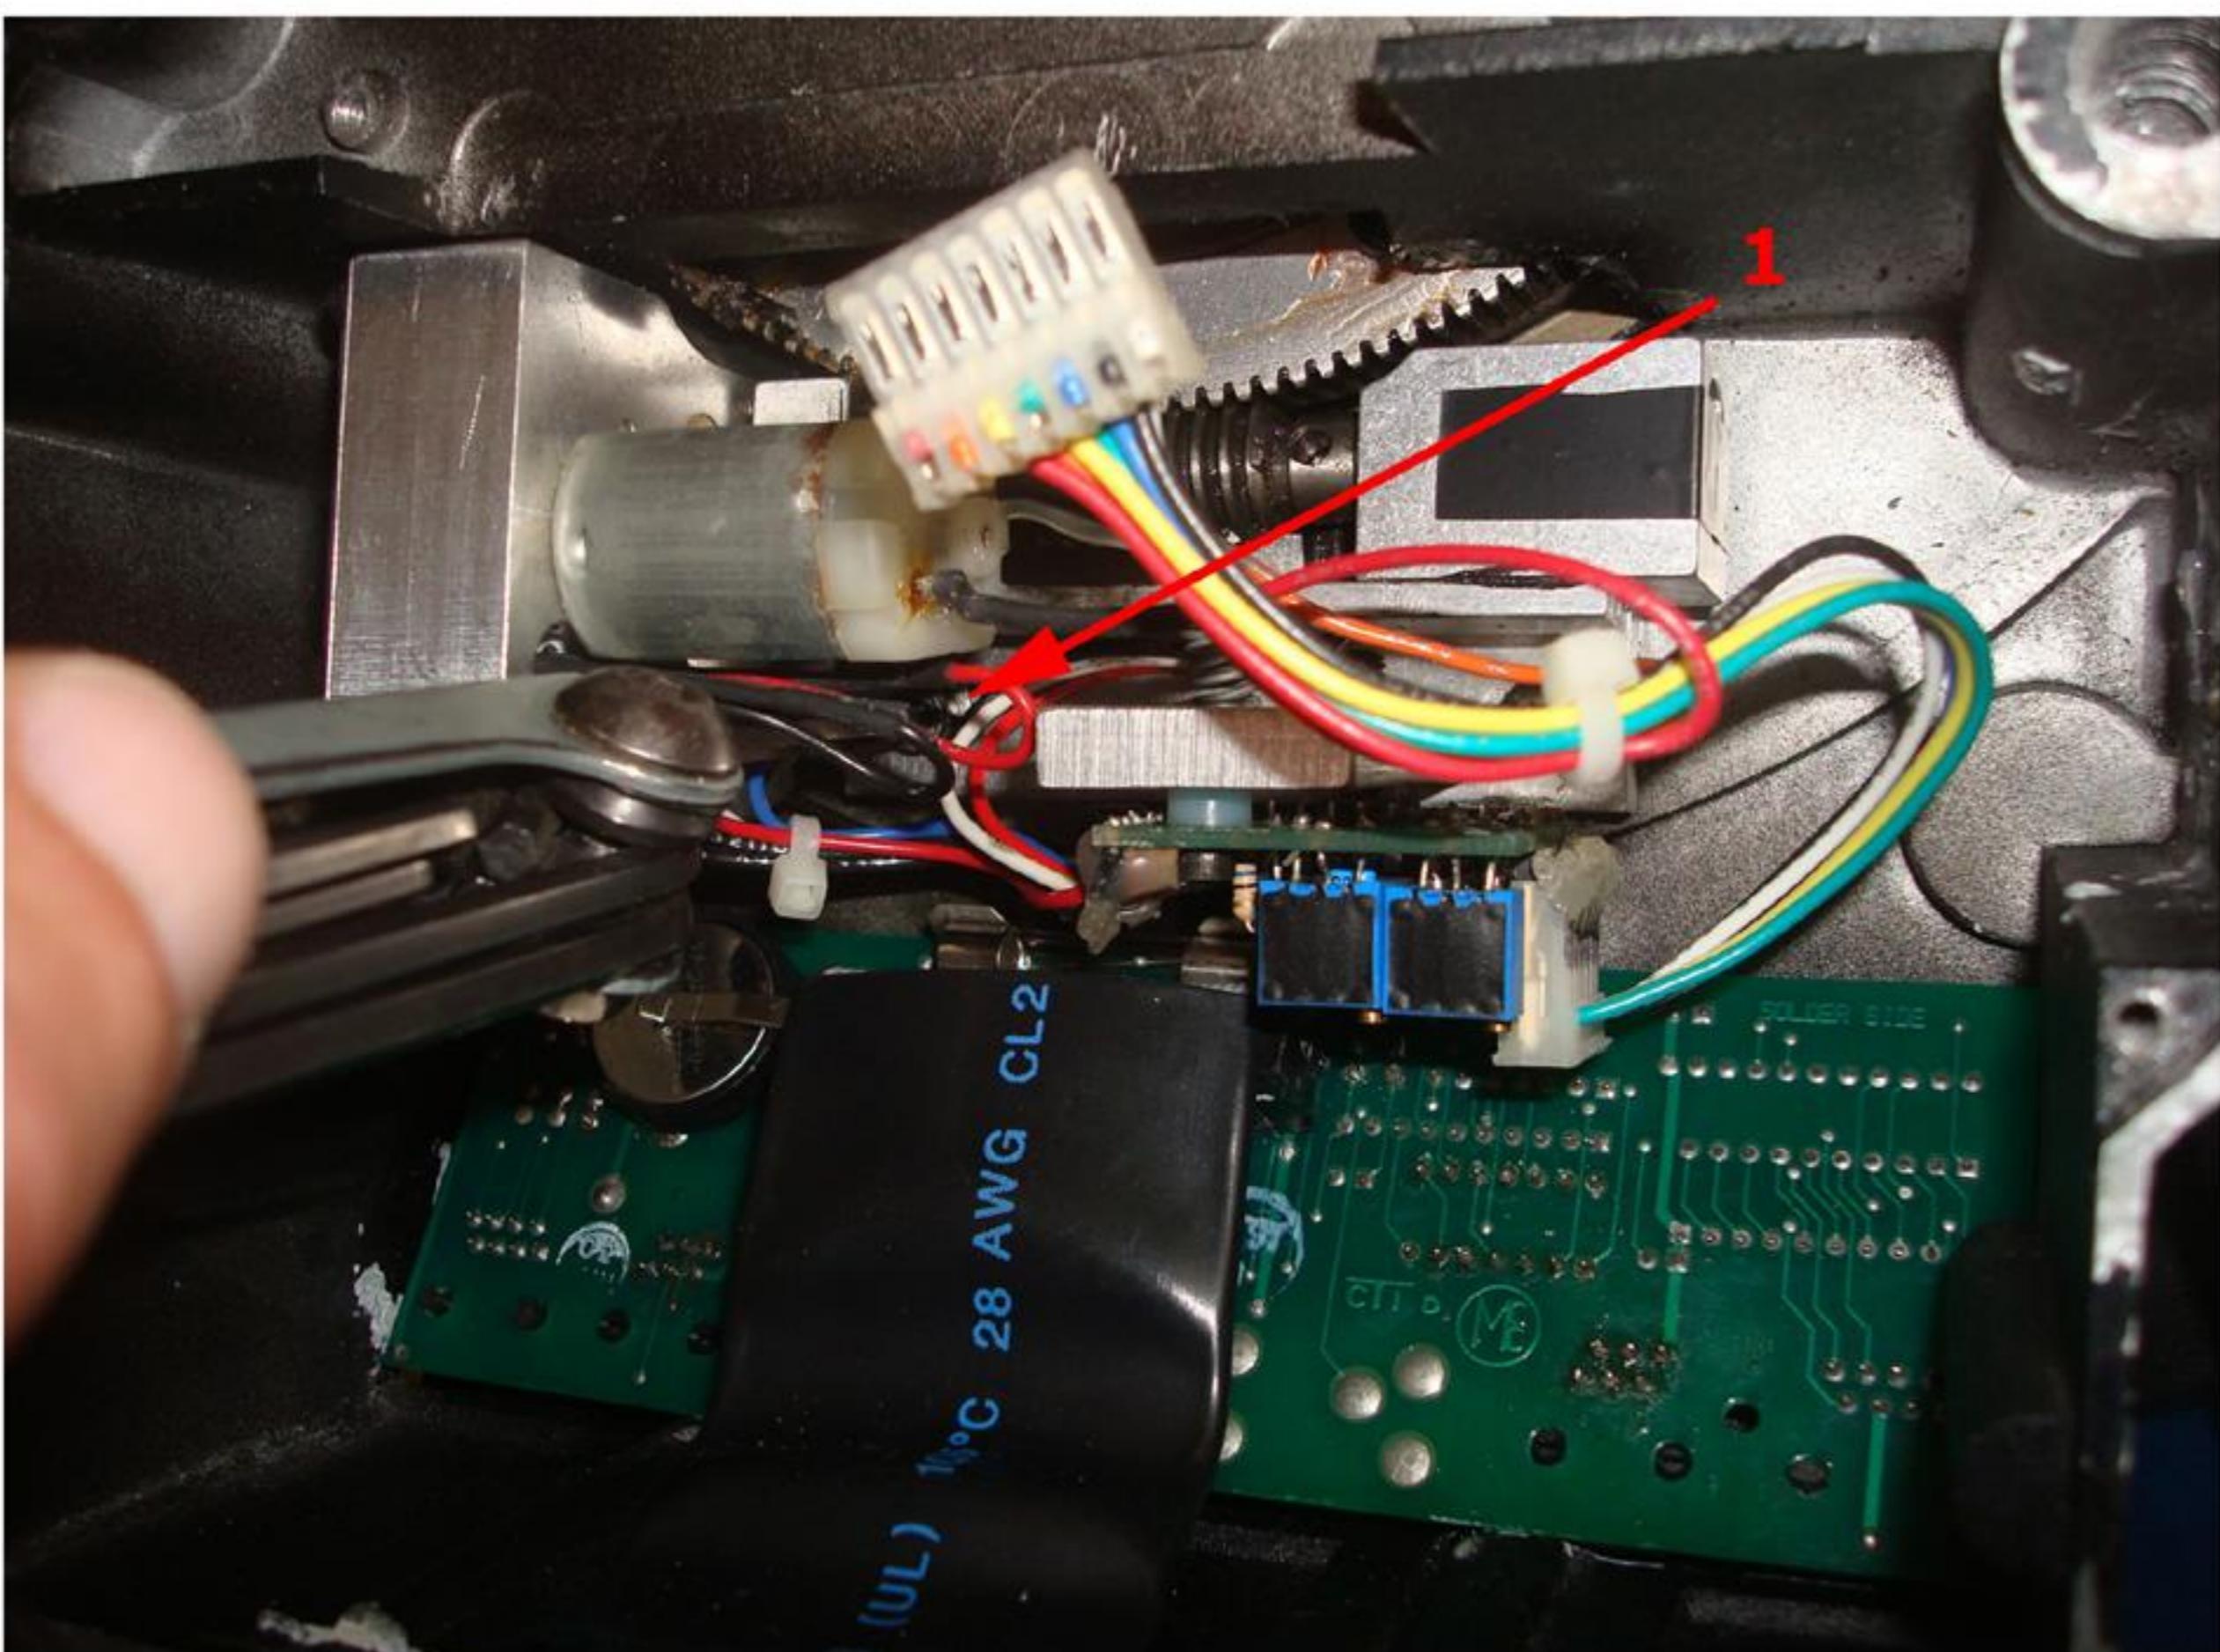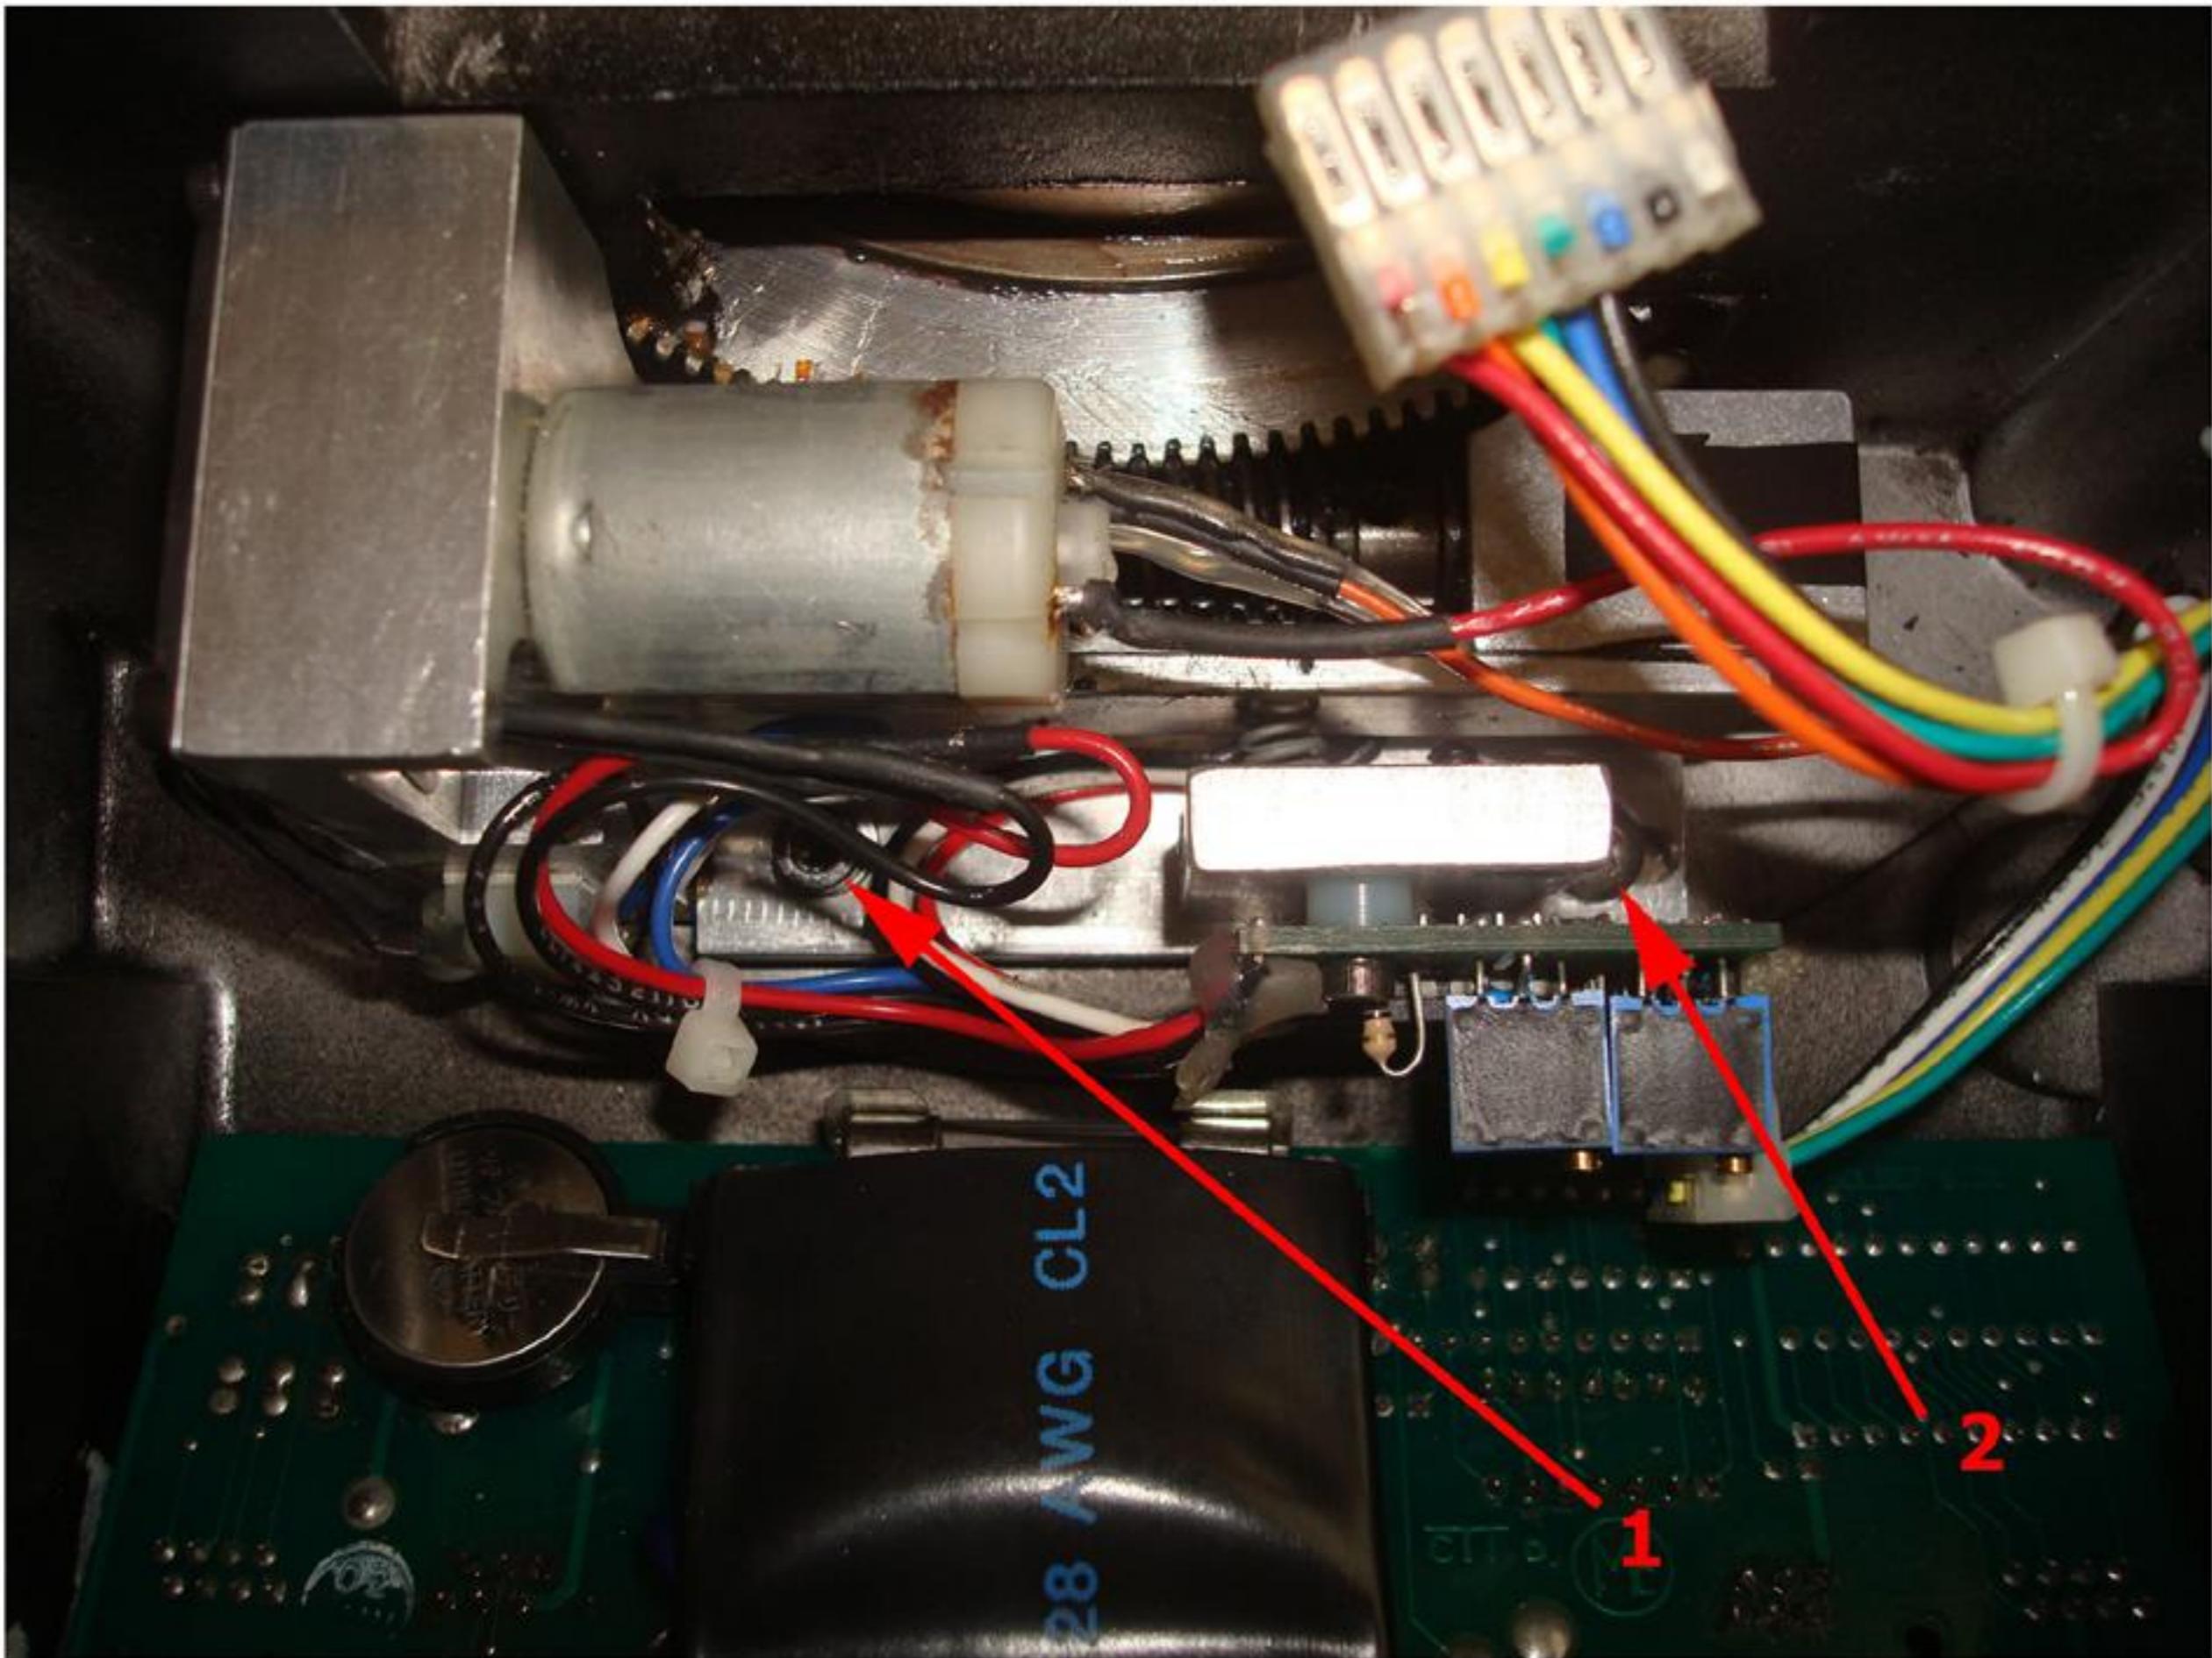

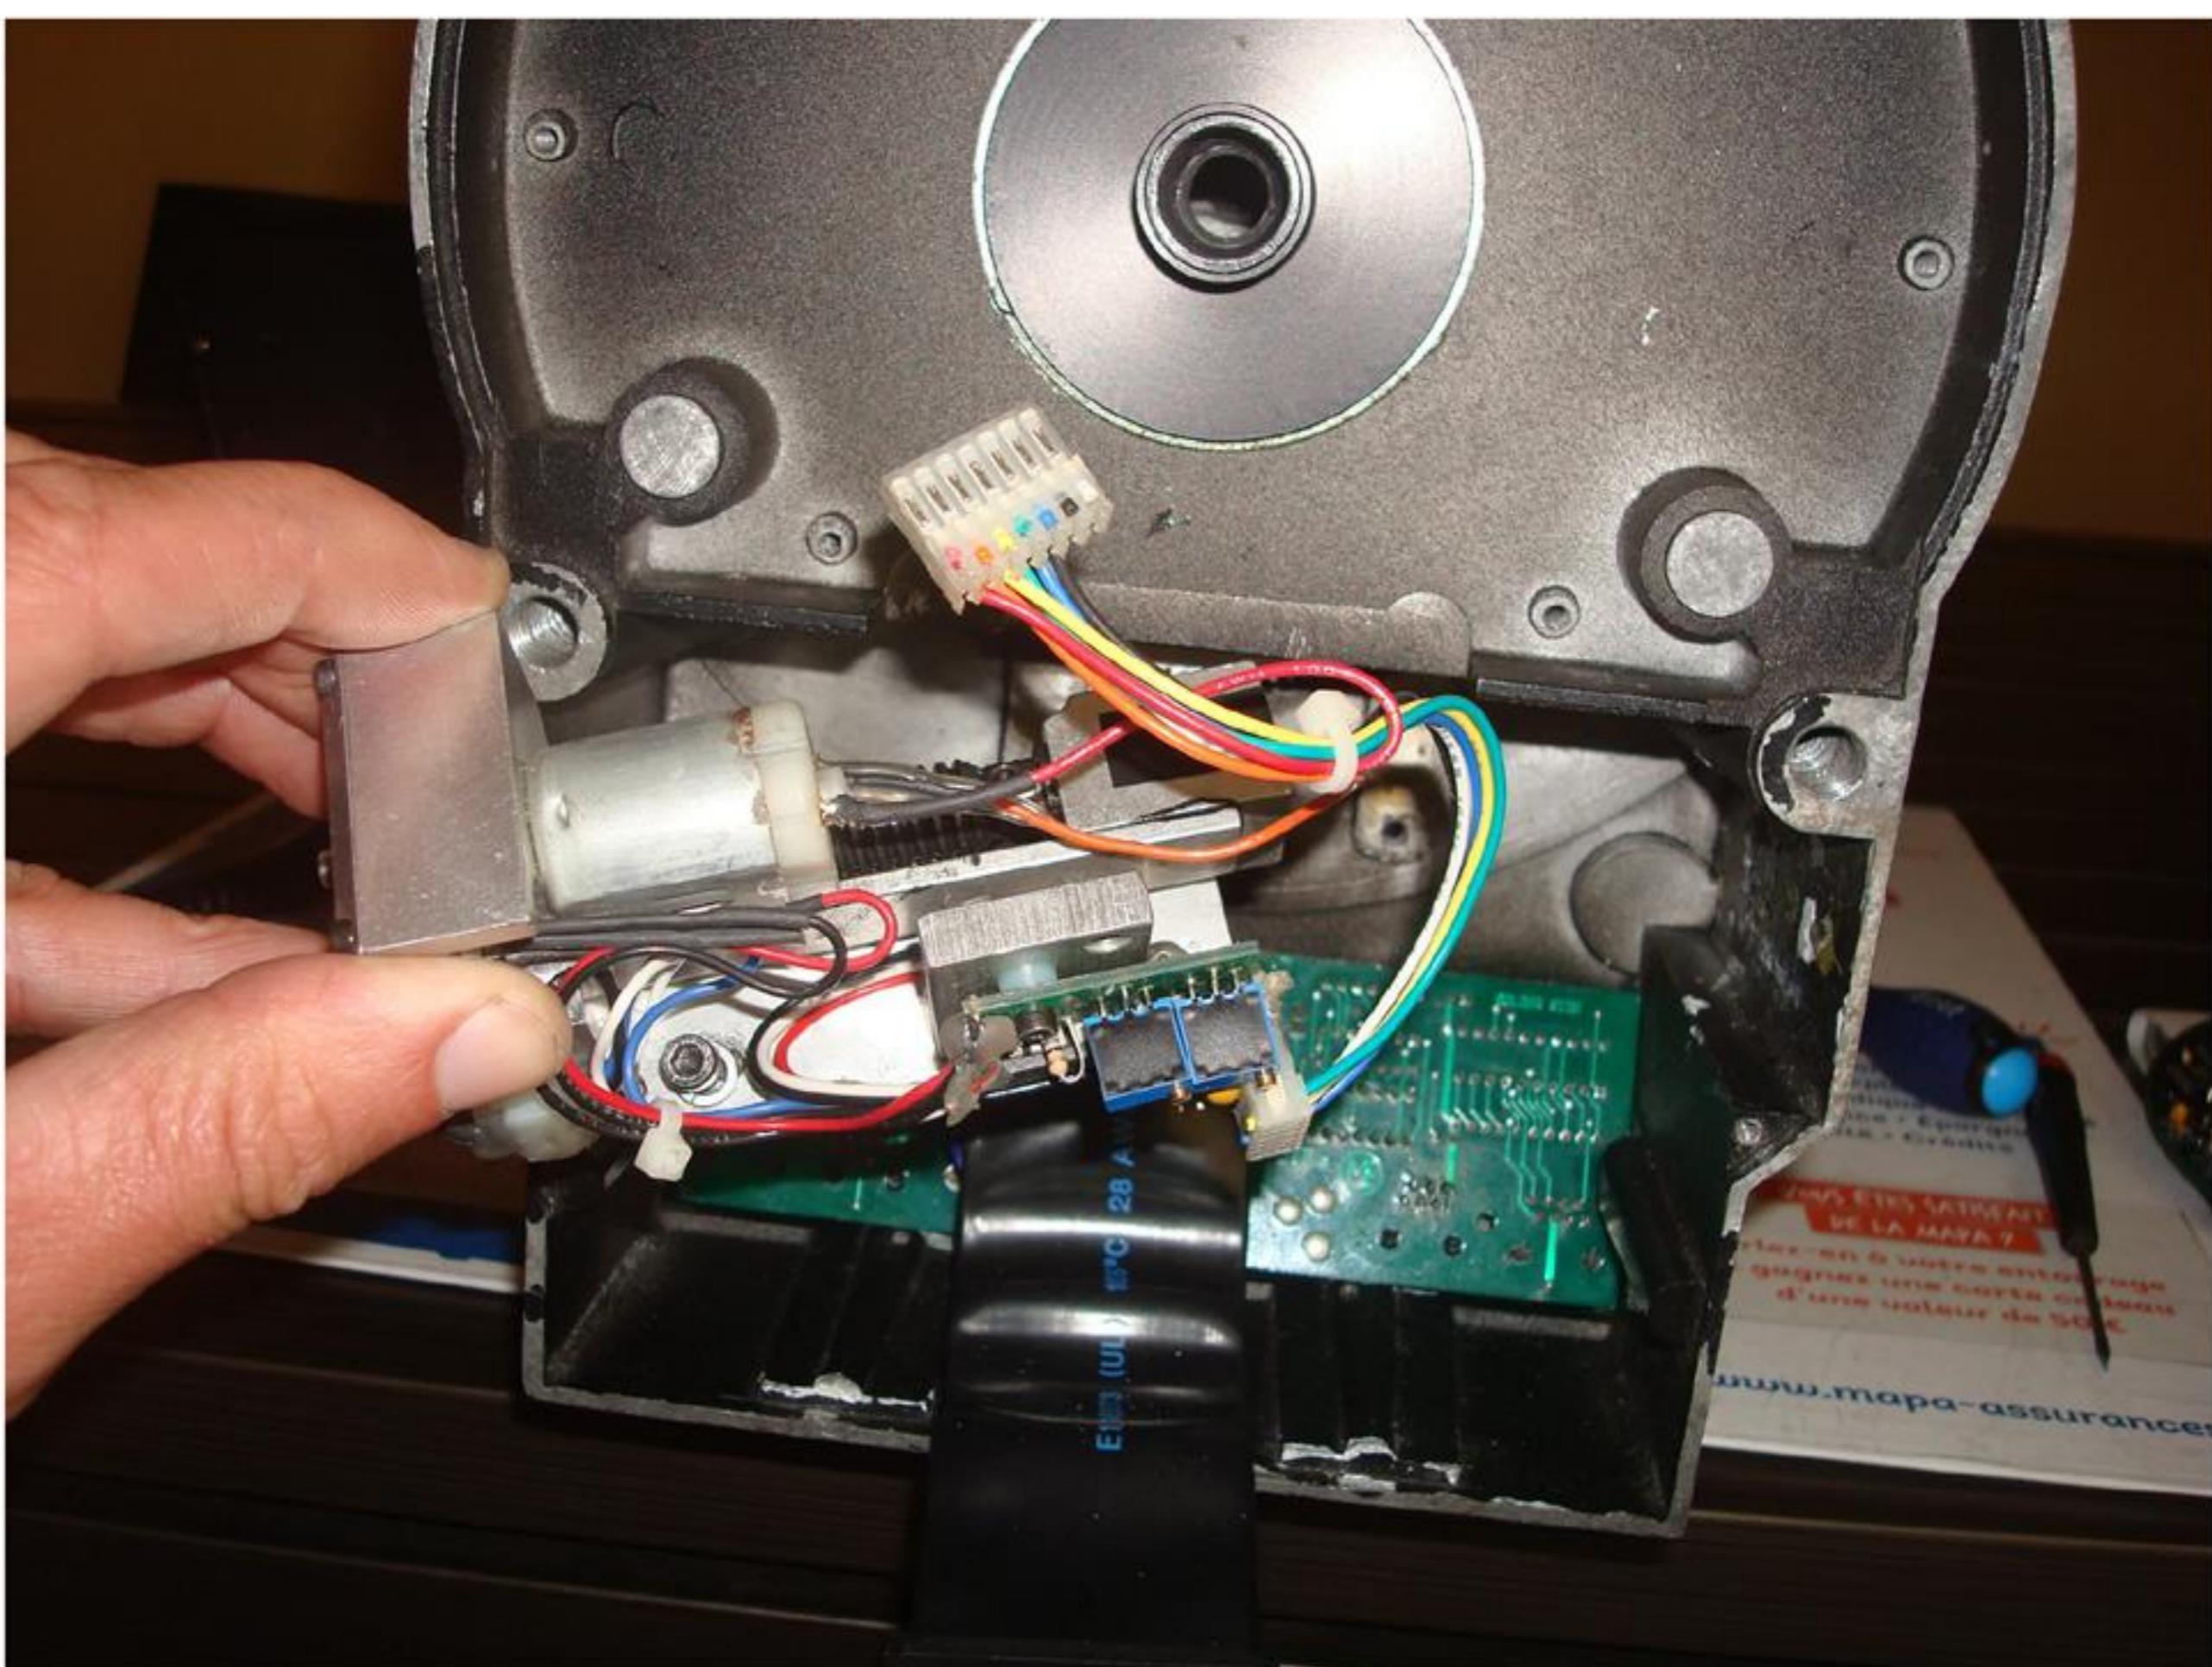

Information → Place of thread holes maintains RA motor

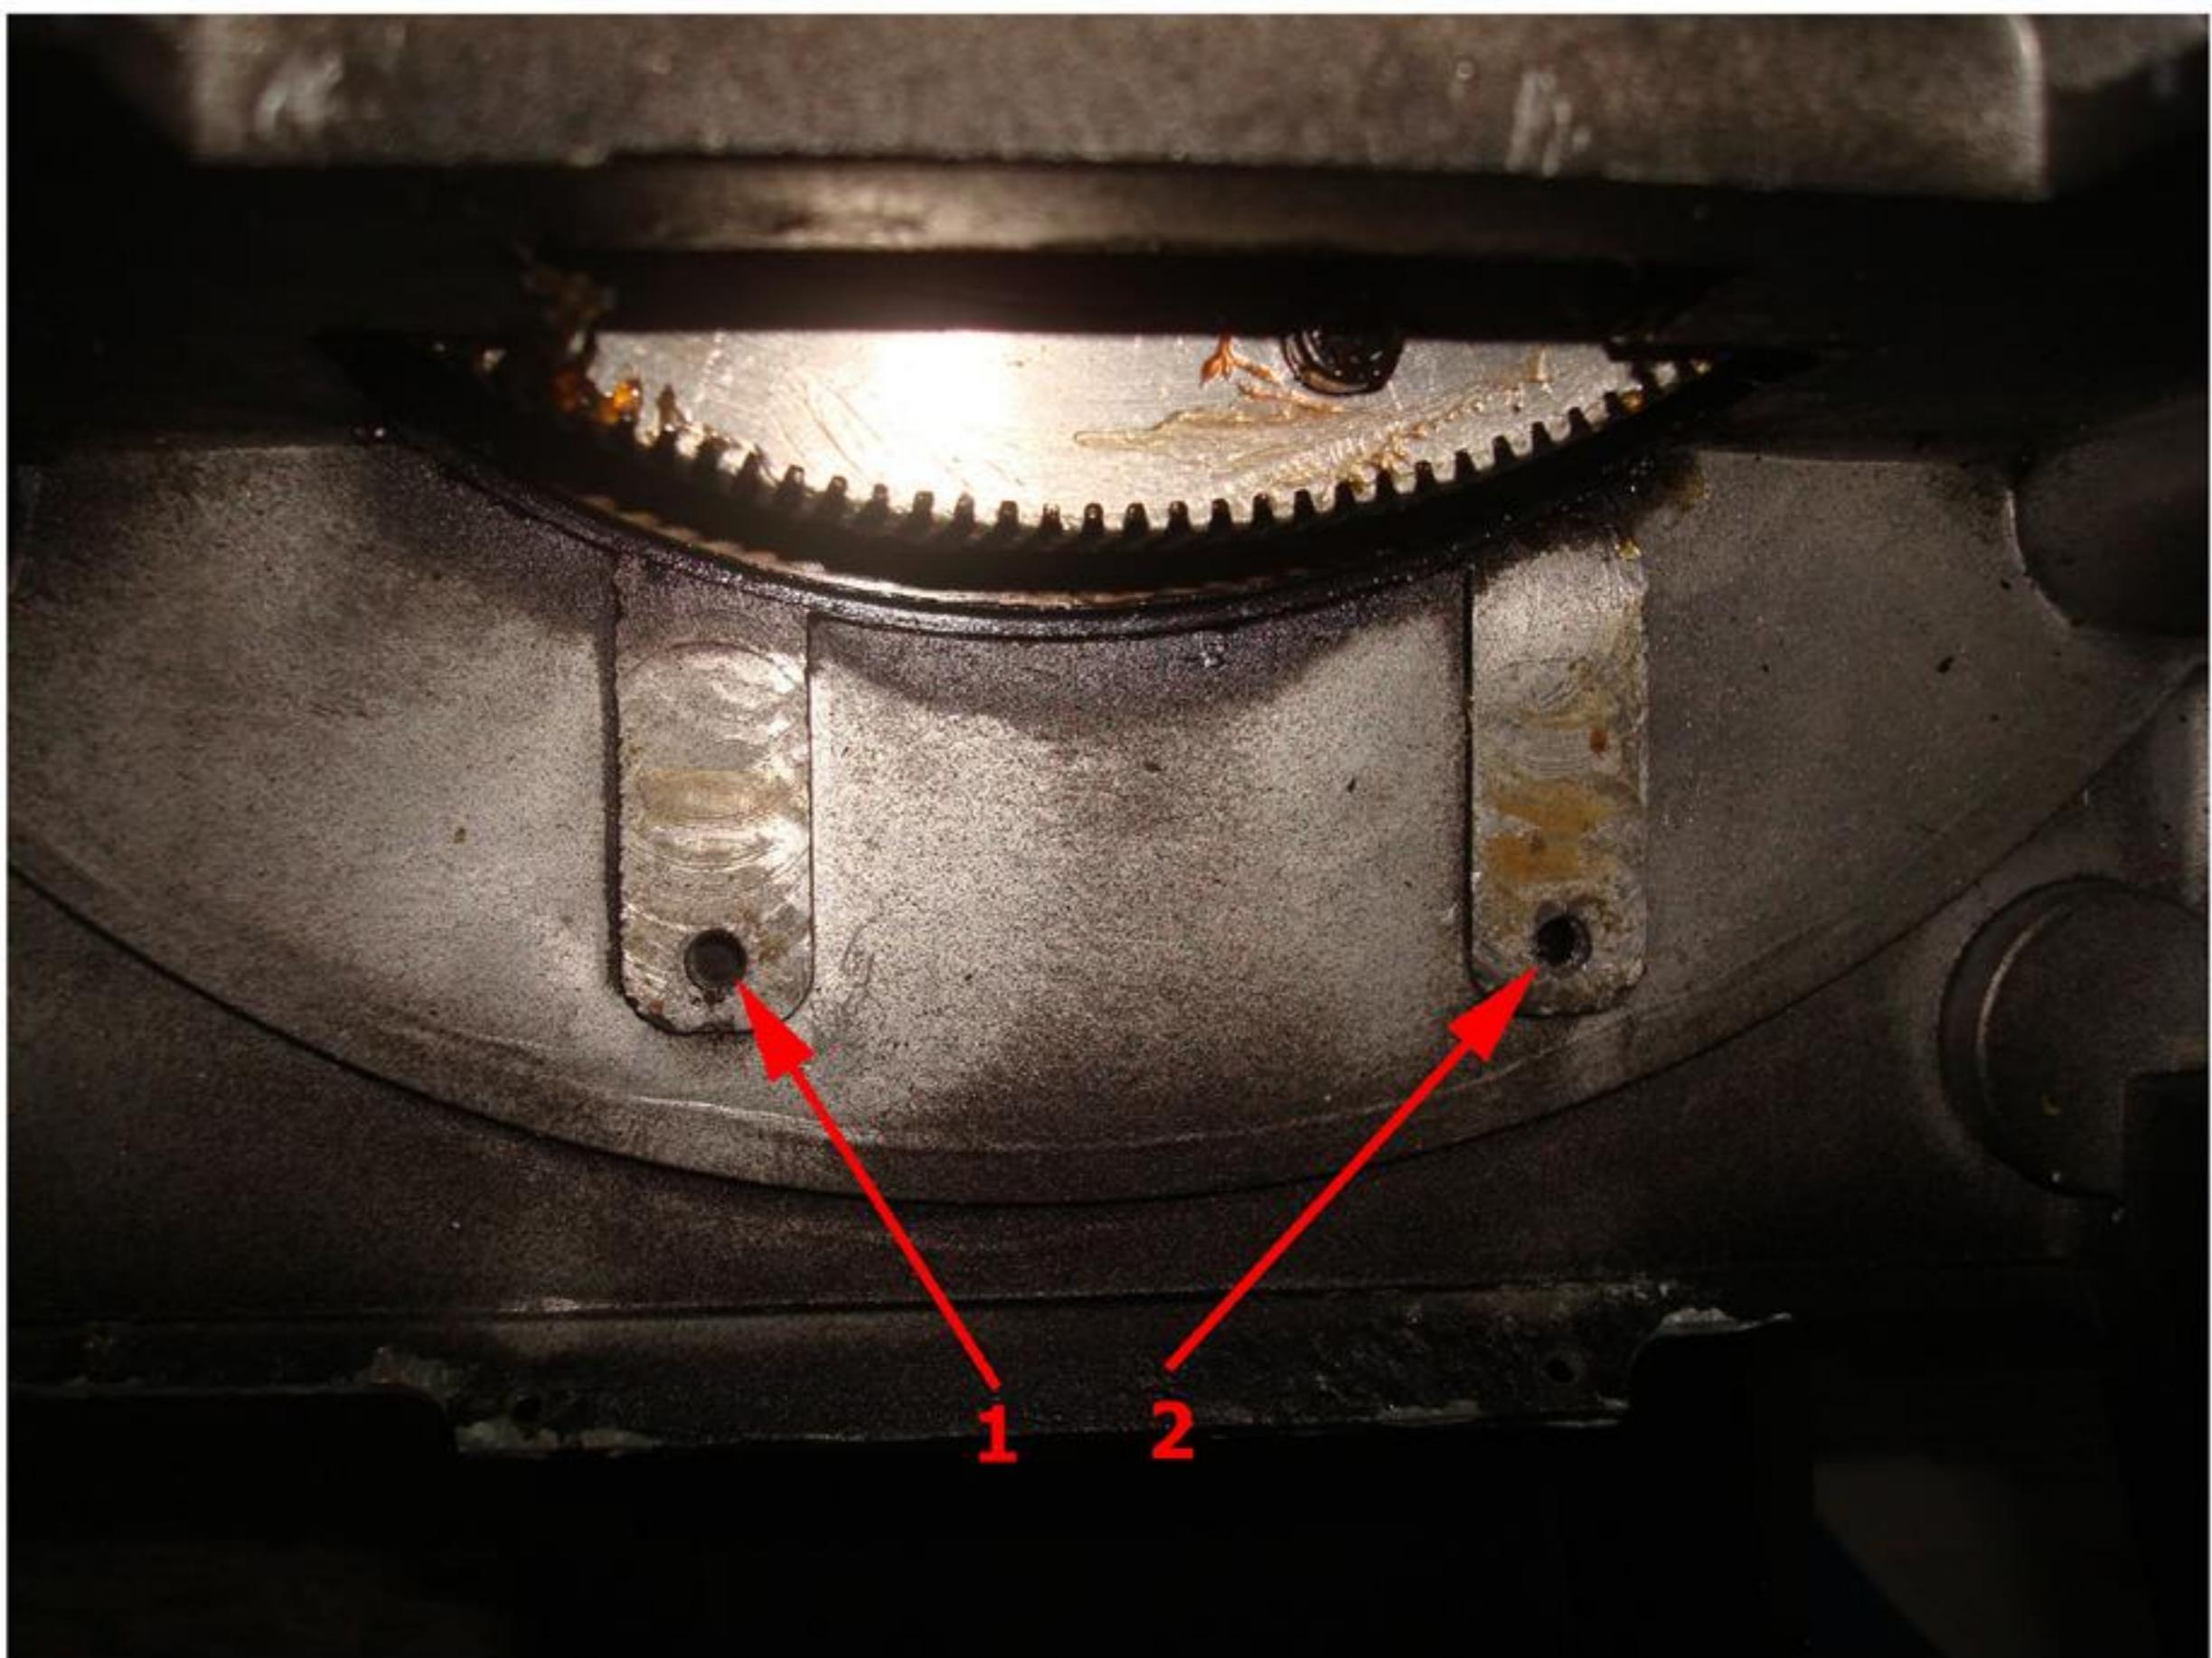

- Remove 4 screws of power panel



- Lift the panel through the bottom, to extract it






- Unscrew and remove the thumb wheel of brake in Declination




- Unscrew 3 screws of maintains of the hood of Declination

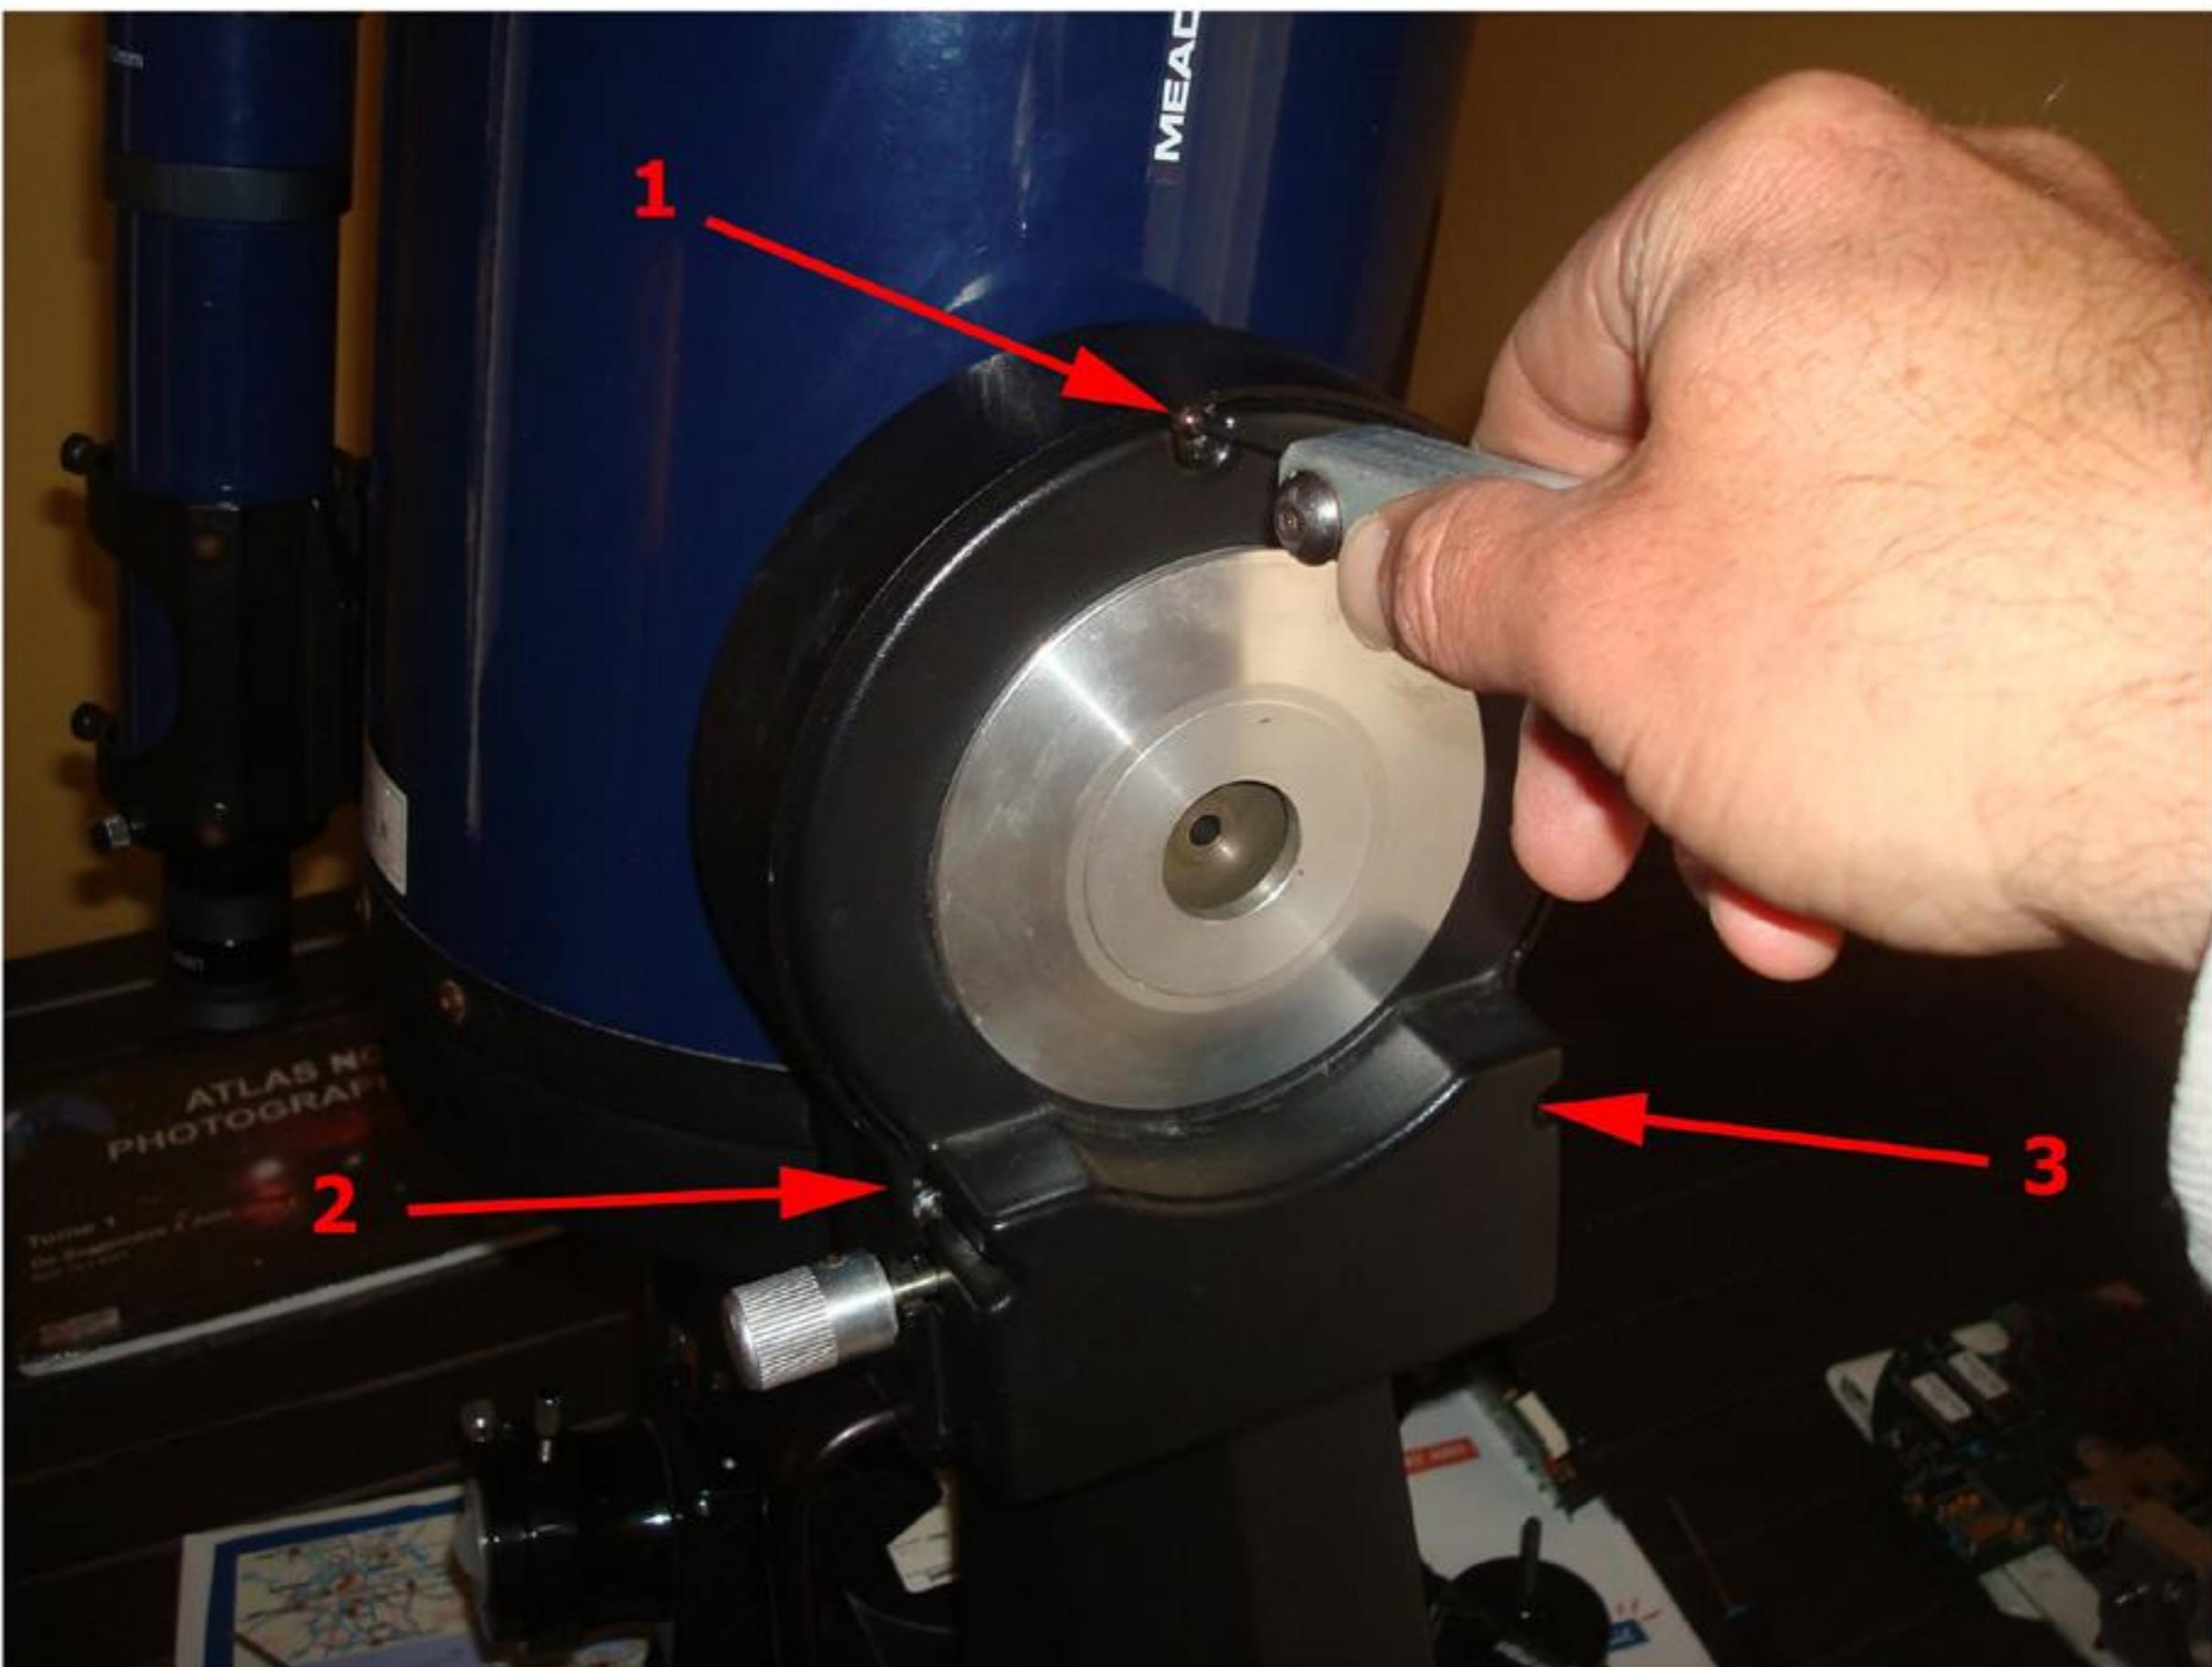


- Remove the hood of Declination




- Unscrew screws 1 and 2 of maintains of the Declination motor

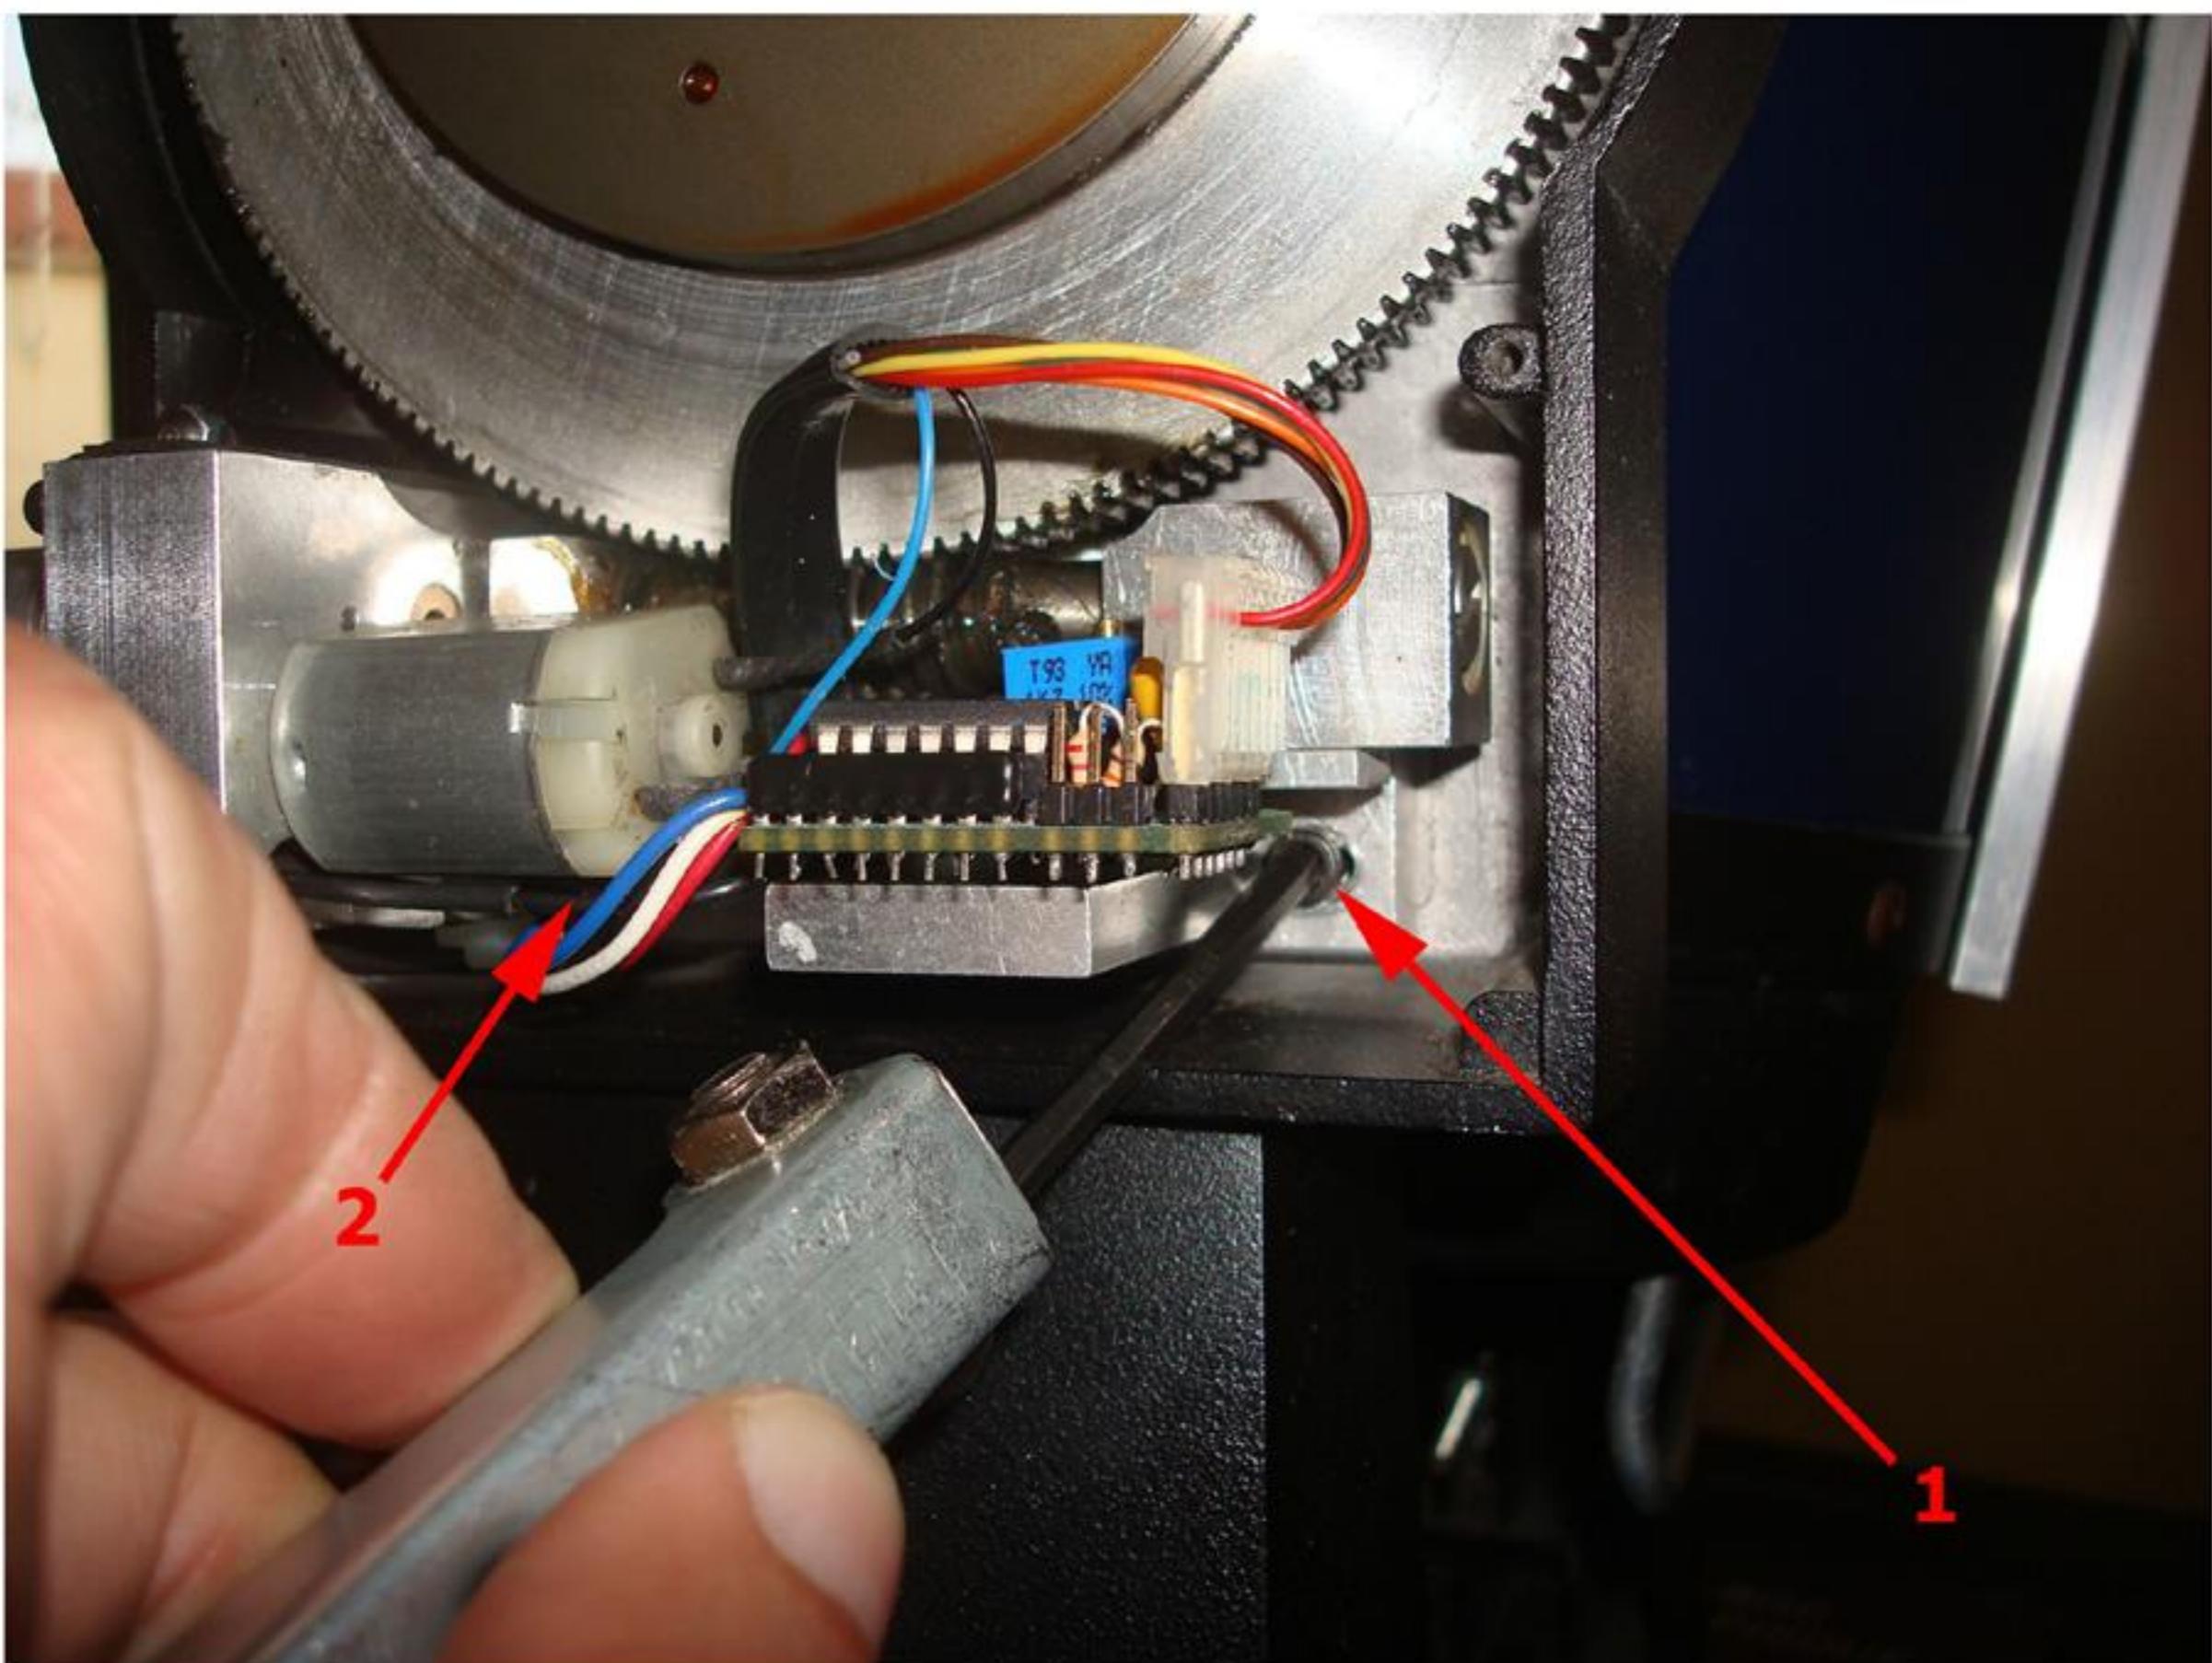


- Remove Declination motor

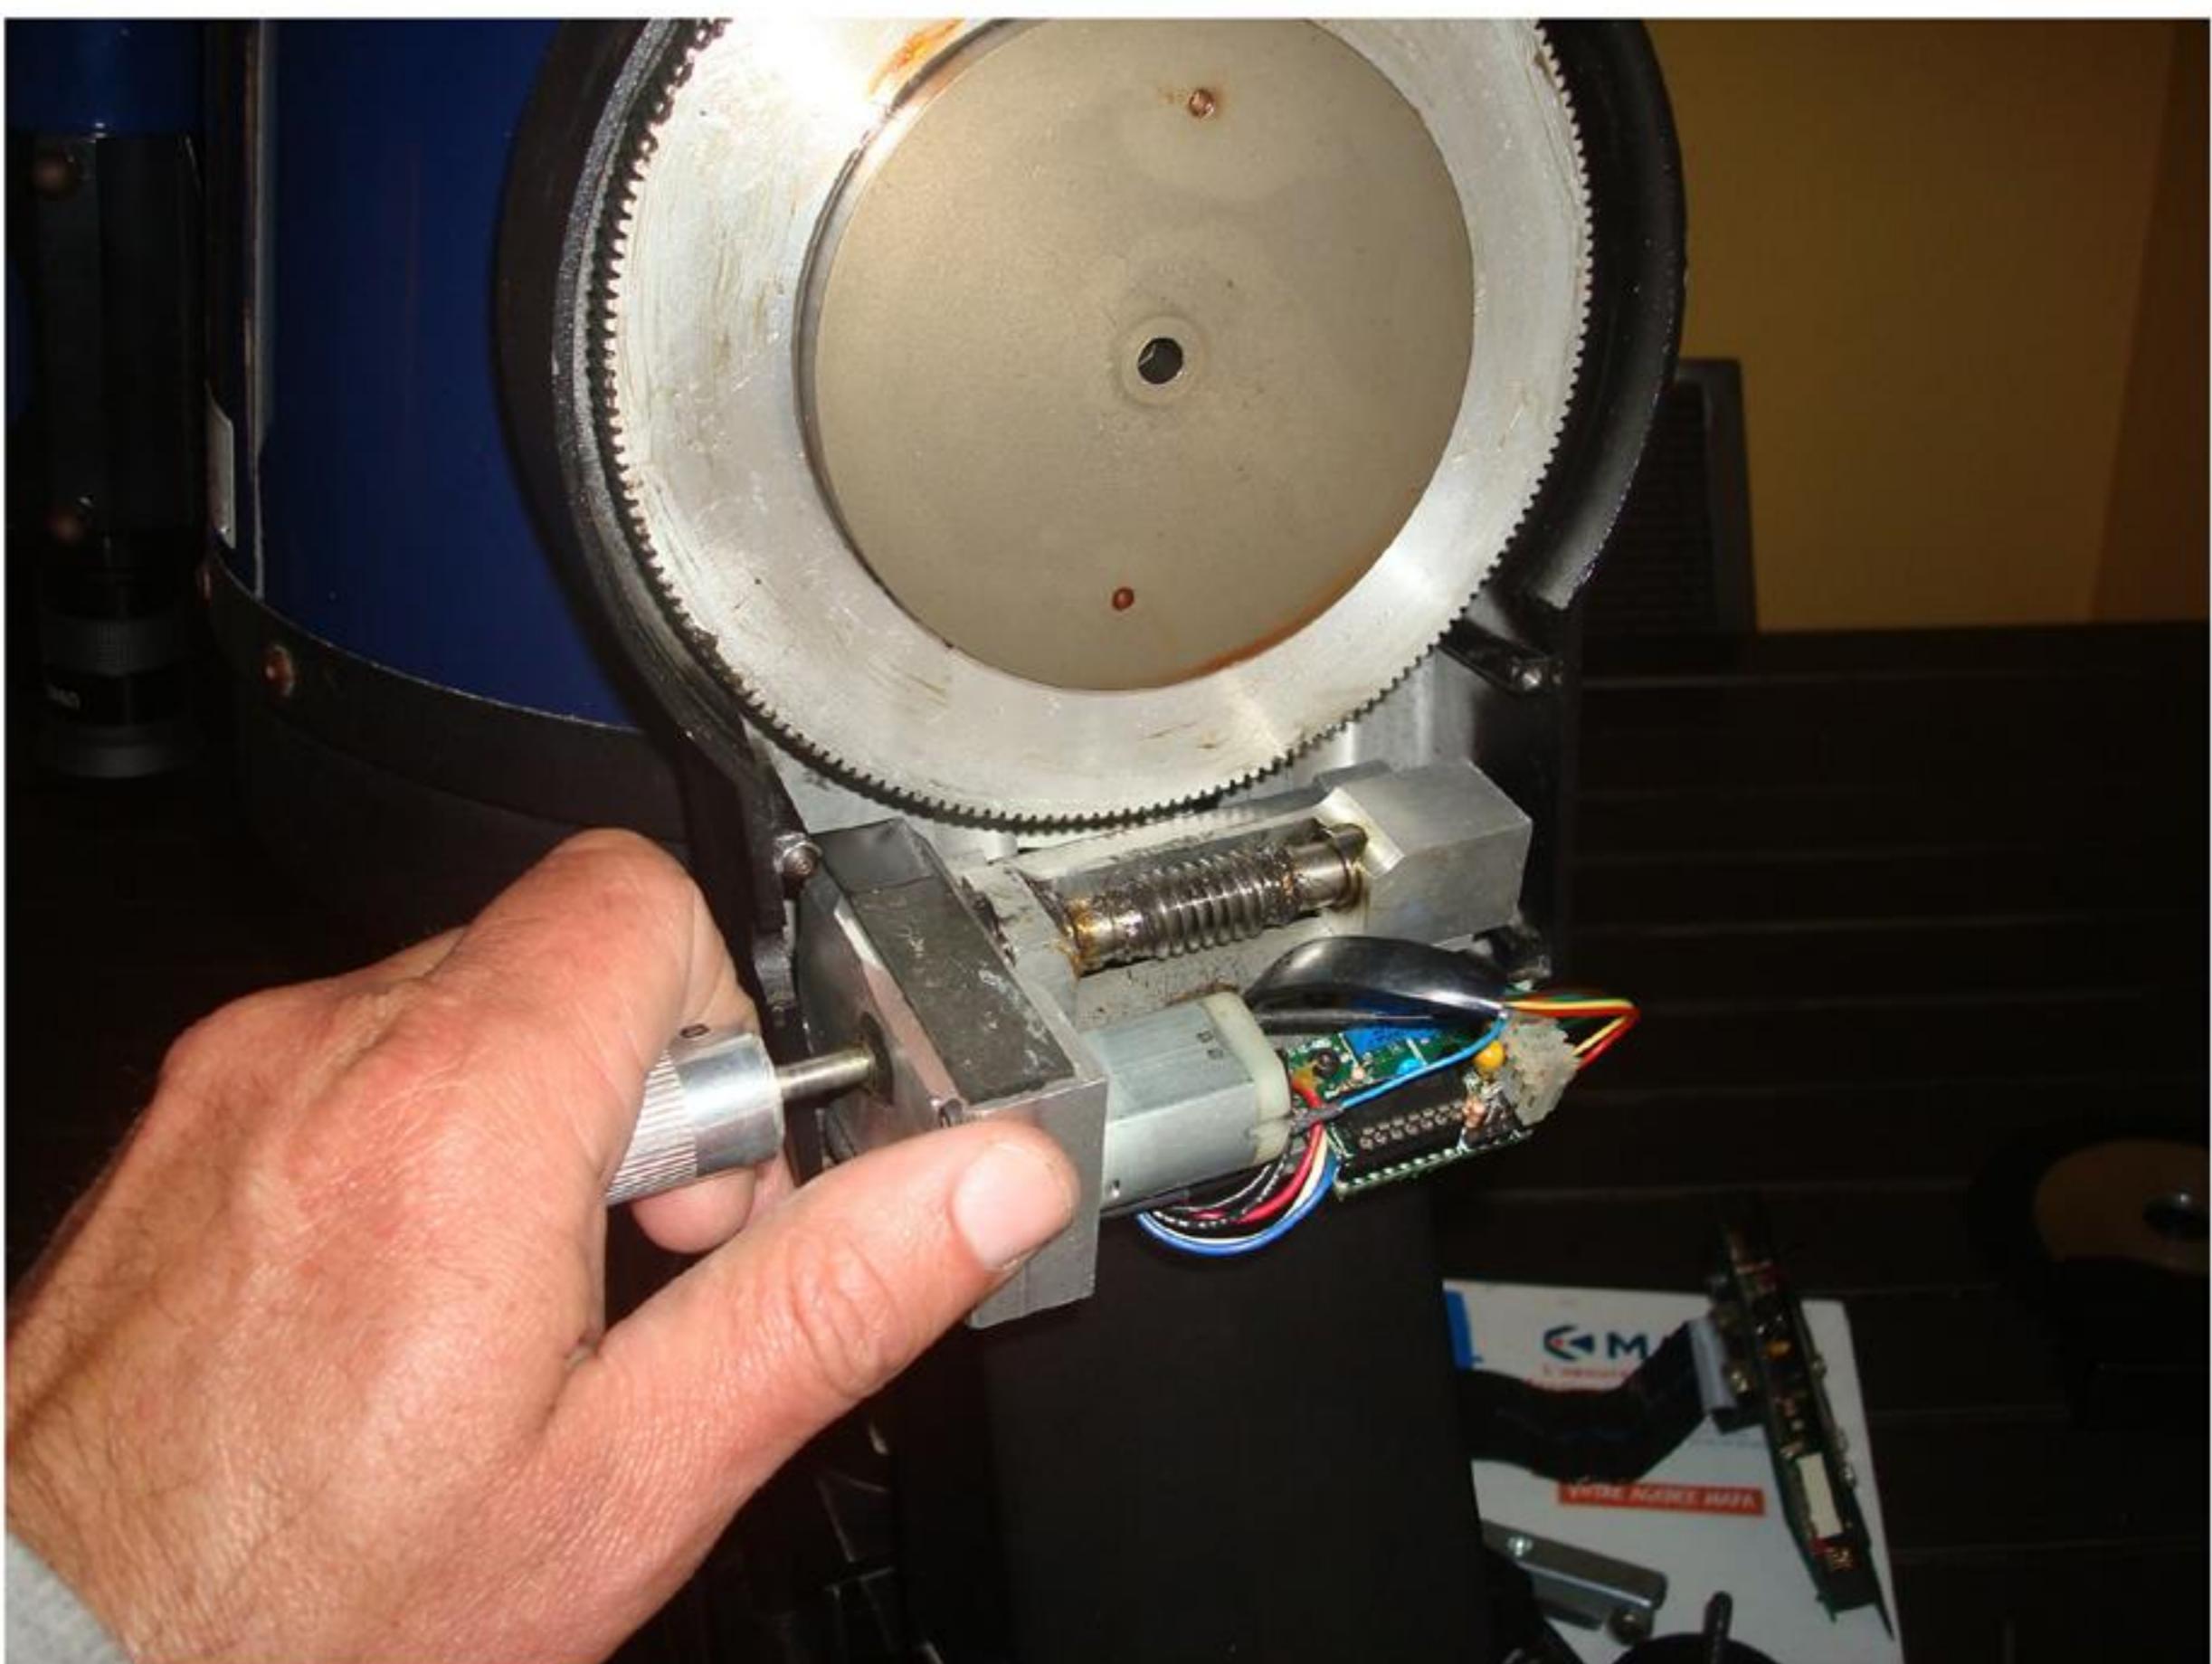

Information → Place of thread holes maintains DEC motor

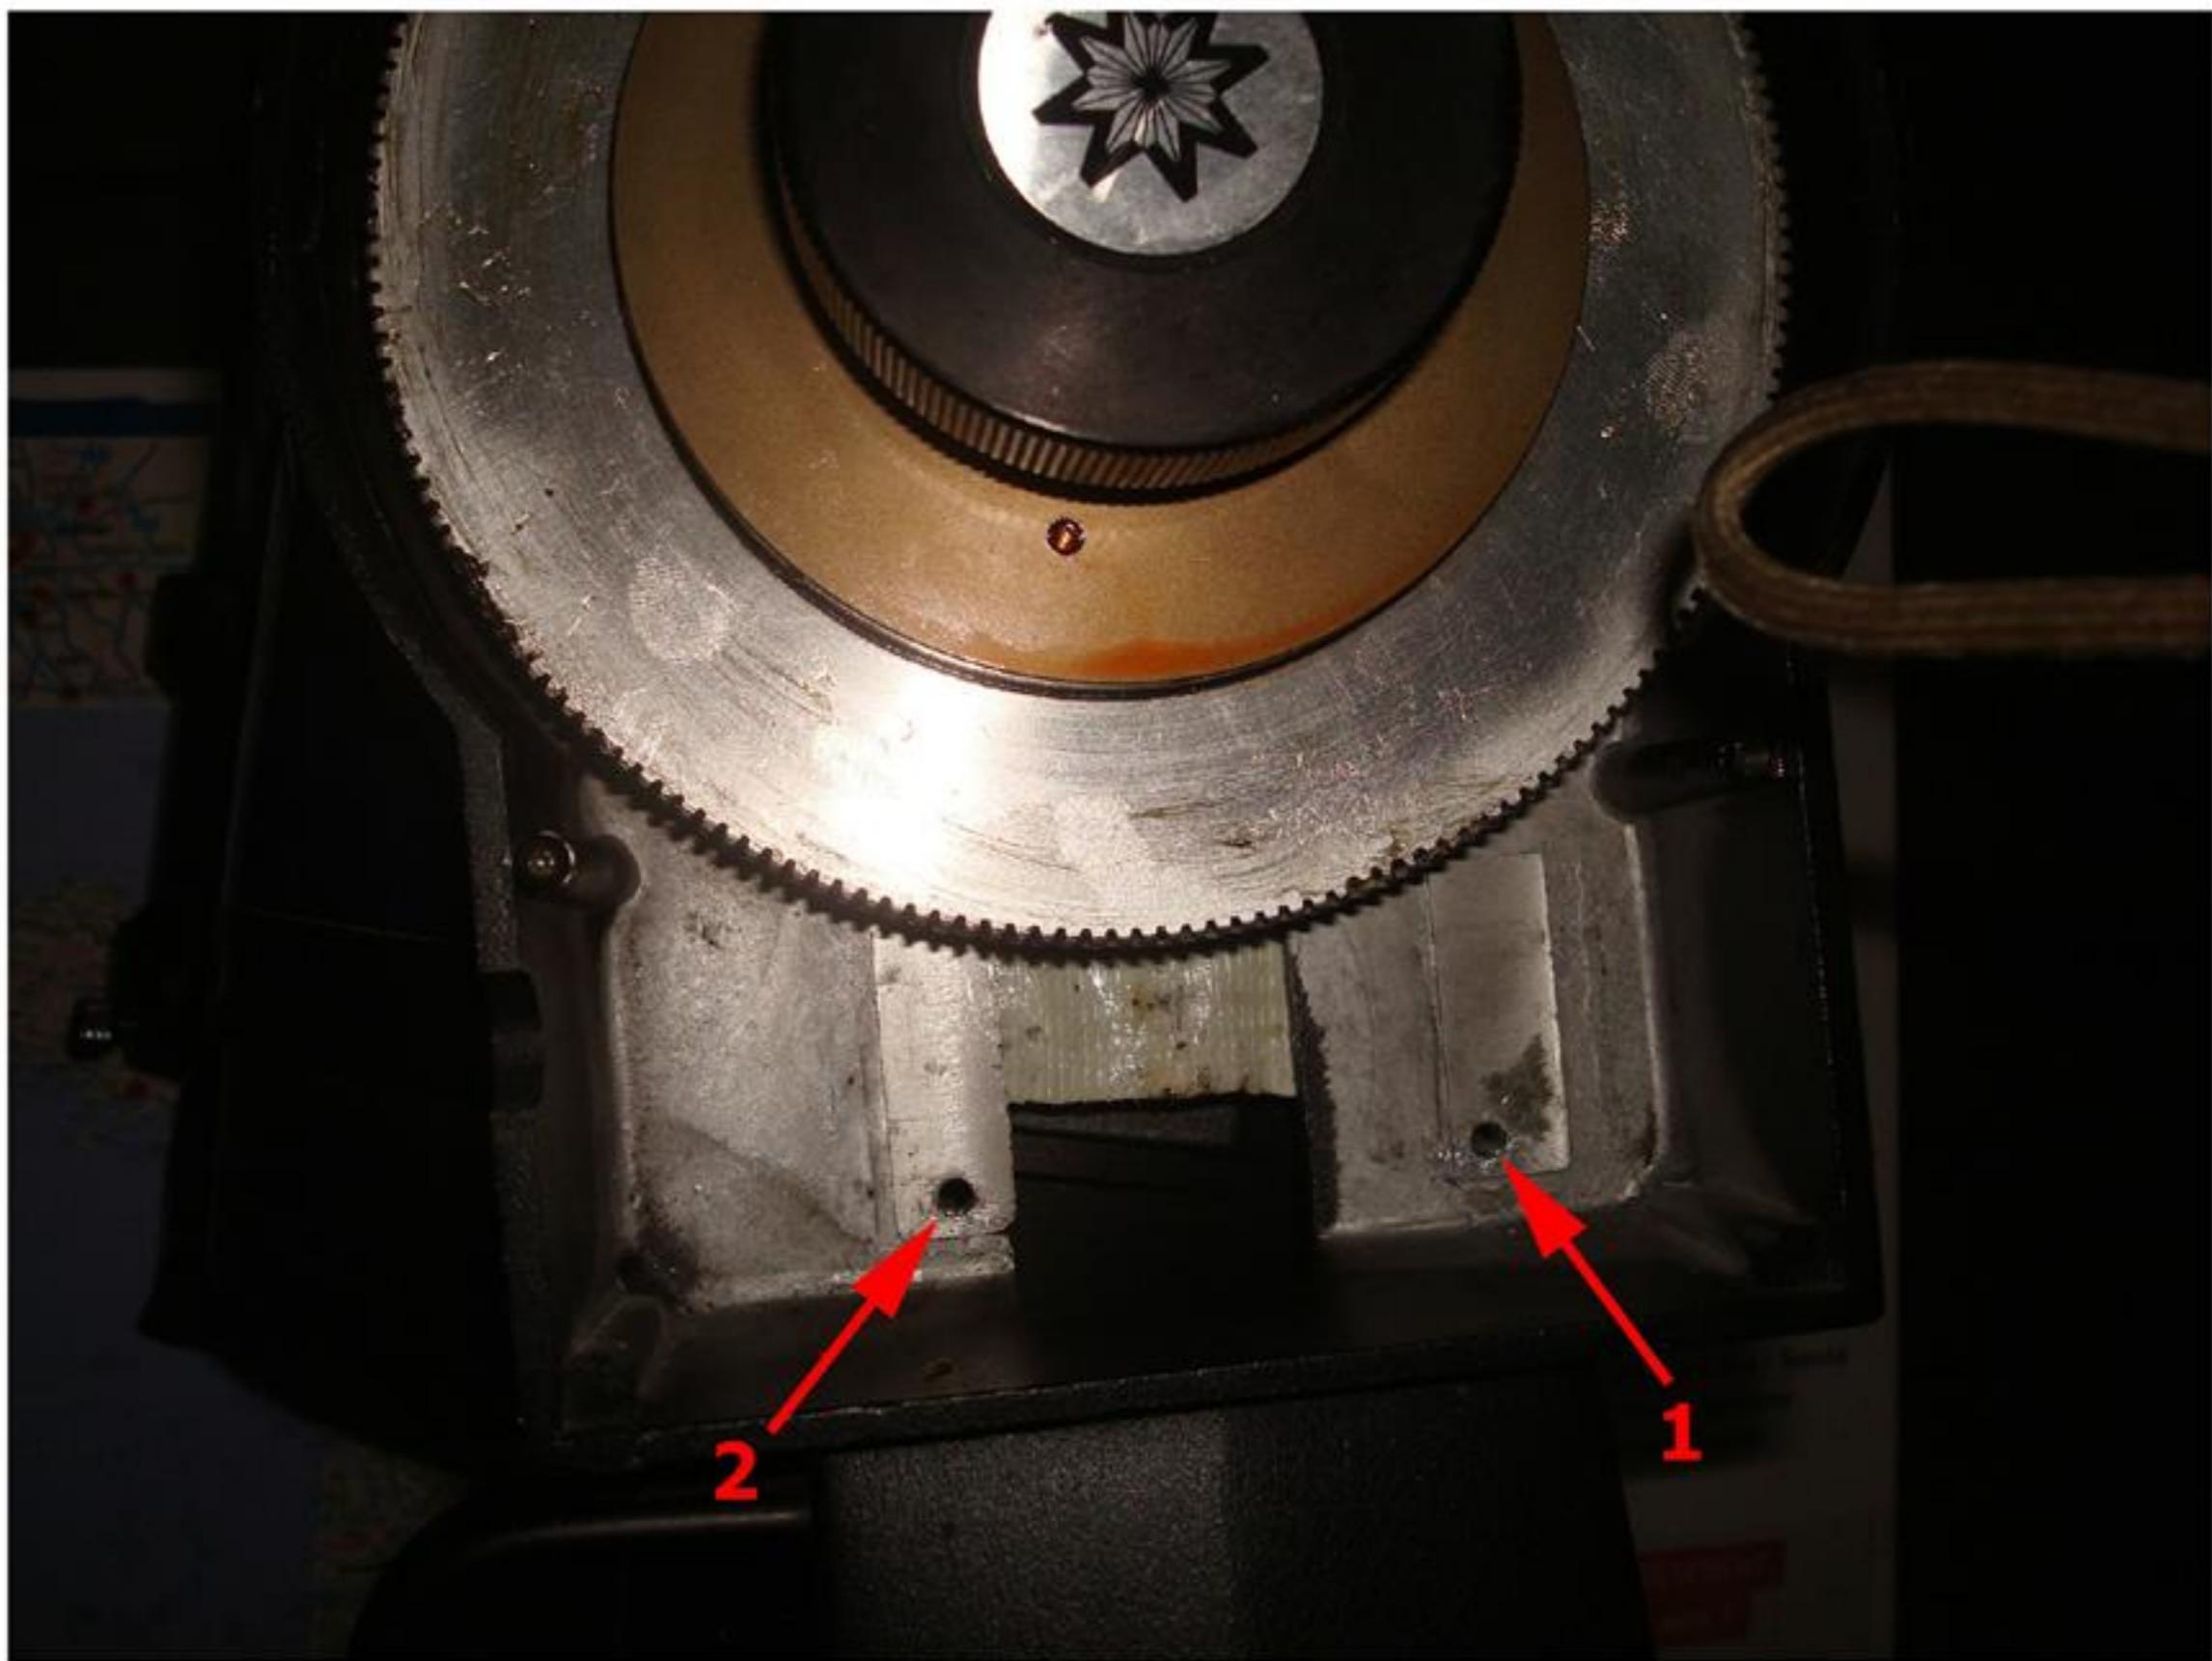

Send all these parts (don't forget cables)

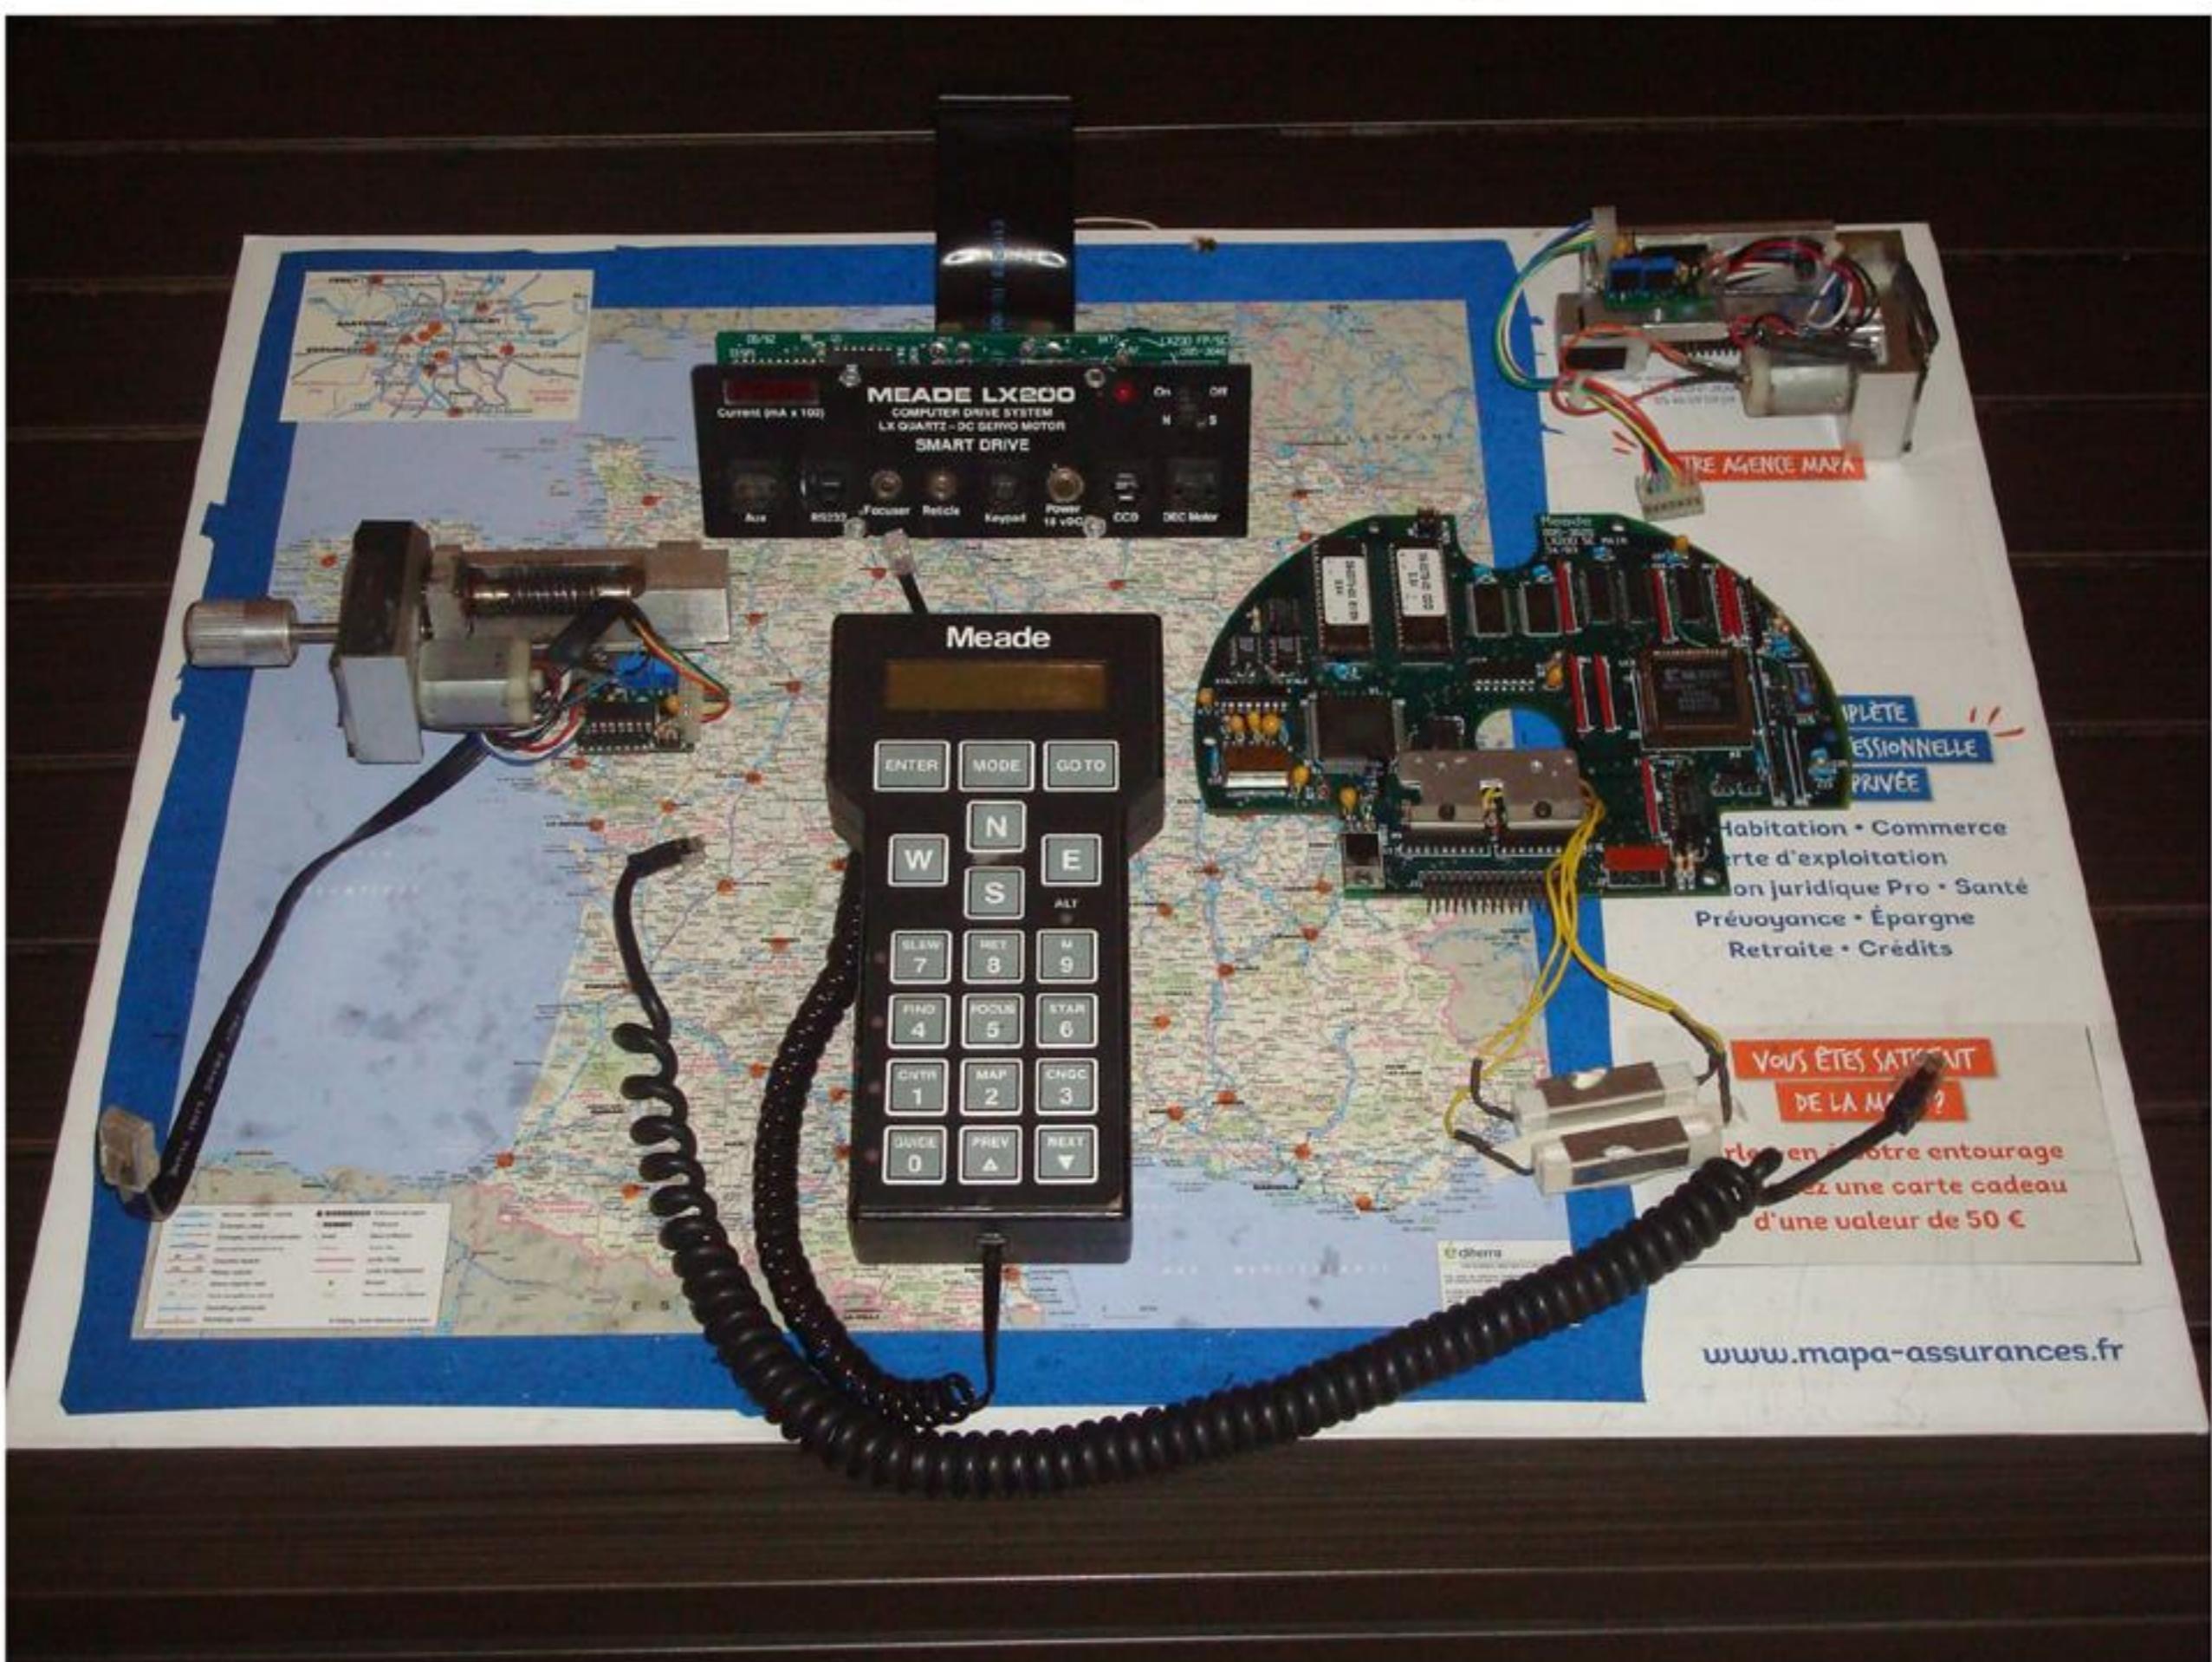

TOOLS

- Phillips screwdriver
- Flat screwdriver

Clés américaines

- **5/64** : mainboard screws
- **1/16** : Hoods of mainboard and Declination screws
- **9/64** : Screws of Declination and RA motors